

JL125T-12 (double disc brakes) PARTS EXPLODE DRAWING
Edition No.: 01 , Year: 2007



CIXI KINGRING MOTORCYCLE CO.,LTD.

INDEX

E-1 Crank Case.....1
 E-2 Cylinder Head Cover2
 E-3 Cylinder.....3
 E-4 Right Crankcase Cover4
 E-5 Carburetor.....5
 E-6 Driven Pulley.....7
 E-7 Starting Motor.....8
 E-8 Fan Cover-Shroud9
 E-9 Transmission.....10
 E-10 Cylinder Head.....11
 E-11 Camshaft-Valve.....12
 E-12 Cam Chain-Tensioner.....13
 E-13 Generator.....14
 E-14 Oil pump.....15
 E-15 Left Crankcase Cover.....16
 E-16 Driven Pulley.....17
 E-17 Crank Shaft-Piston.....18
 F-01 Headlight.....19
 F-02 Meter Assy.....20
 F-03 Switches.....21
 F-04 Front break master cylinder.....22
 F-05 Steering handle.....23
 F-06 Front cover.....24
 F-07 Front luggage box.....25
 F-08 Floor panel.....26
 F-09 Luggage case & Rear cover.....27
 F-10 Front Fork.....28
 F-11 Front break caliper.....29
 F-12 Front Wheel.....30
 F-13 Floor plate.....31
 F-14 Rear wheel.....32
 F-15 Rear break caliper.....33
 F-16 Rear wheel.....34
 F-17 Seat cushion.....35
 F-18 Fuel Tank.....36
 F-19 Battery.....37
 F-20 Air cleaner.....38
 F-21 Exhaust Muffler.....39
 F-22 Stand.....40
 F-23 Rear cushion.....41
 F-24 Rear tender.....42
 F-25 Winkers.....43
 F-26 Taillight.....44
 F-27 Wire Harness.....45
 F-28 Frame body.....46
 F-29 Tool set.....47
 F-30 Rear Carrier.....48

Address: Kingring Developing Zone, Cixi, Ningbo, Zhejiang 315301, P.R.China

Tel: 0086 574 63219030, 63218692, 63218196; 63218672


Fax: 0086 574 63218193

E-mail: motor@kingring.com

Website: www.kingringmotor.com; kingring.en.alibaba.com


Attention: Please kindly note the latest unit prices (usd) in the below charts are updated every month according to the latest

MONTH - YEAR:	March . 2014
Current exchange rate:	7,8073

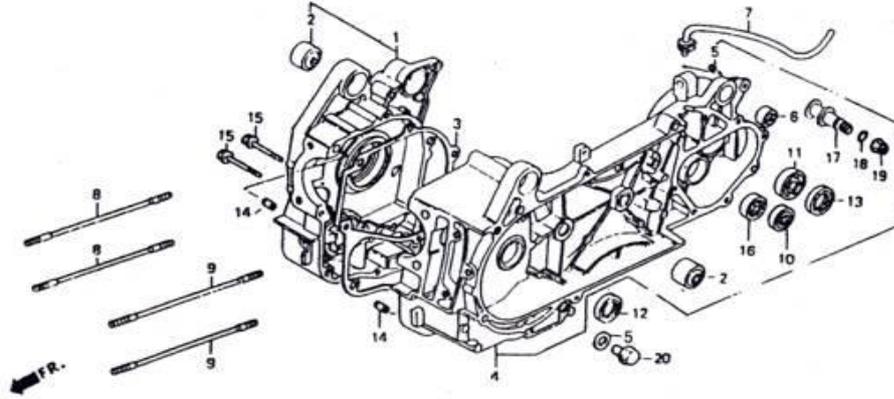


E-1 Crank case

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0101	CRANKCASE ASSY R	1	
2	E0102	BUSH ENGINE HANGER RUBBER	2	
3	E0103	GASKET CRANKCASE	1	
4	E0104	CRANKCASE ASSY L	1	
5	E0105	WASHER DRAIN PLUG 12MM	2	
6	E0106	BUSH RR CUSHION UNDER RUBBER	1	
7	E0107	TUBE BREATHER	1	
8	E0108	BOLT STUD 8X187.5	1	
9	E0109	BOLT STUD 8X195.5	2	
10	E0110	BEARING RADIAL BALL 6201	2	
11	E0111	BEARING RADIAL BALL 6004UU	1	
12	E0112	OIL SEAL 19.8X30X5	1	
13	E0113	OIL SEAL 27X42X7	1	
14	E0114	PIN DOWEL 8X14	1	
15	E0115	BOLT FLANGE 6X50	2	
16	E0116	BEARING RADIAL BALL 6002	2	
17	E0117	PIN BRAKE SHOE ANCHOR	1	
18	E0118	O-RING 7.5X1.5	1	
19	E0119	NUT FLANGE 8MM	1	
20	E0120	BOLT DRAIN PLUG 12MM	1	

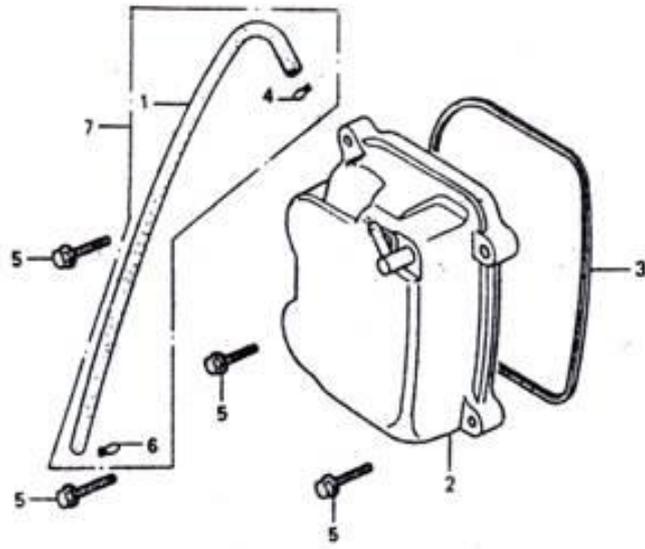


E-2 Cylinder Head Cover

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0201	TUBE BREATHER	1	
2	E0202	COVER COMP CYLINDER HEAD	1	
3	E0203	CASKET HEAD COVER	1	
4	E0204	CLAMP TUBE(D8.5)	2	
5	E0205	BOLT FLANGE 6X25	4	
6	E0206	CORD HEAD COVER	1	

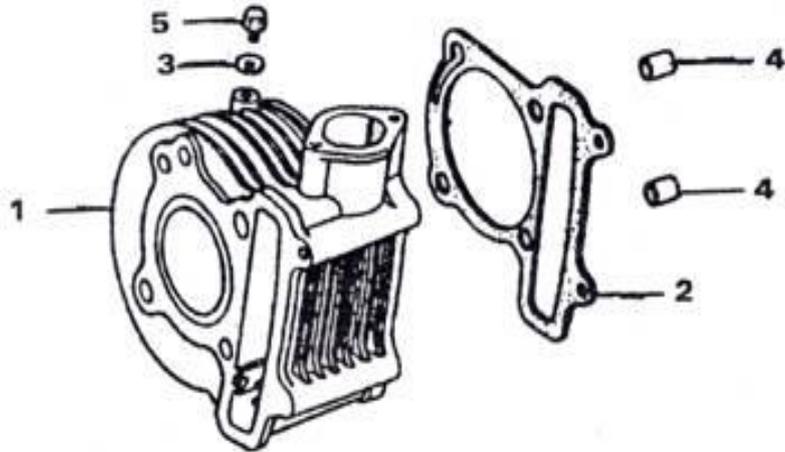


E-3 Cylinder

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0301	CYLINDER COMP	4	
2	E0302	GASKET CYLINDER	1	
3	E0303	WASHER SEALING 6.5MM	1	
4	E0304	PIN DOEWL 10X16	2	
5	E0305	BOLT FLANG 6X12	1	

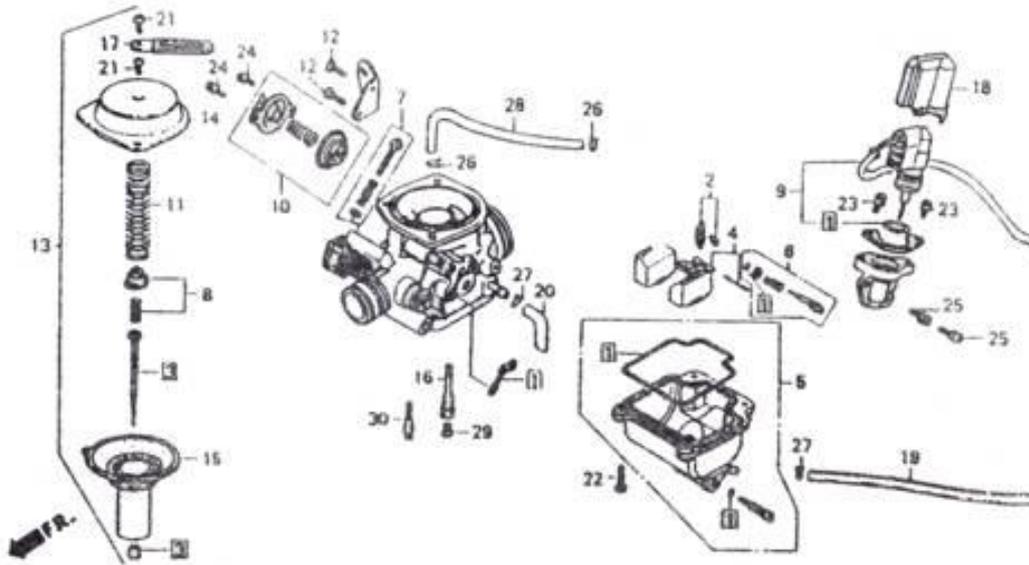


E-5Carburetor

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y
1	E0501	GASKET SET	1
2	E0502	VALVE SET FLDAT	1
3	E0503	NEEDLE SET JET	1
4	E0504	SET FLDAT	1
5	E0505	CHAMBER SET FLDAT	1
6	E0506	SCREW SET A	1
7	E0507	SCREW SET B	1
8	E0508	PLATE SET VALVE	1
9	E0509	VALVE SET STARTER	1
10	E0510	VALVE SET AIR CUT	1
11	E0511	SPRING COMPRESSION	1
12	E0512	SCREW PAN 5X12	2
13	E0513	CARBURETOR ASSY	1
14	E0514	TOP COMP	1
15	E0515	PISTON COMP VACUUM	1
16	E0516	HOLDER NEEDLE JET	1
17	E0517	CLIP PLATE	1
18	E0518	CAP HOLDER	1
19	E0519	TUBE	1
20	E0520	TUBE	1
21	E0521	SCREW PAN 4X8	2
22	E0522	SCREW PAN 4X14	4
23	E0523	SCREW WASHER 4X8	2
24	E0524	SCREW WASHER 4X10	2
25	E0525	SCREW WASHER 5X12	2
26	E0526	CLIP B7 TUBE	2
27	E0527	CLIP B8 TUBE	2

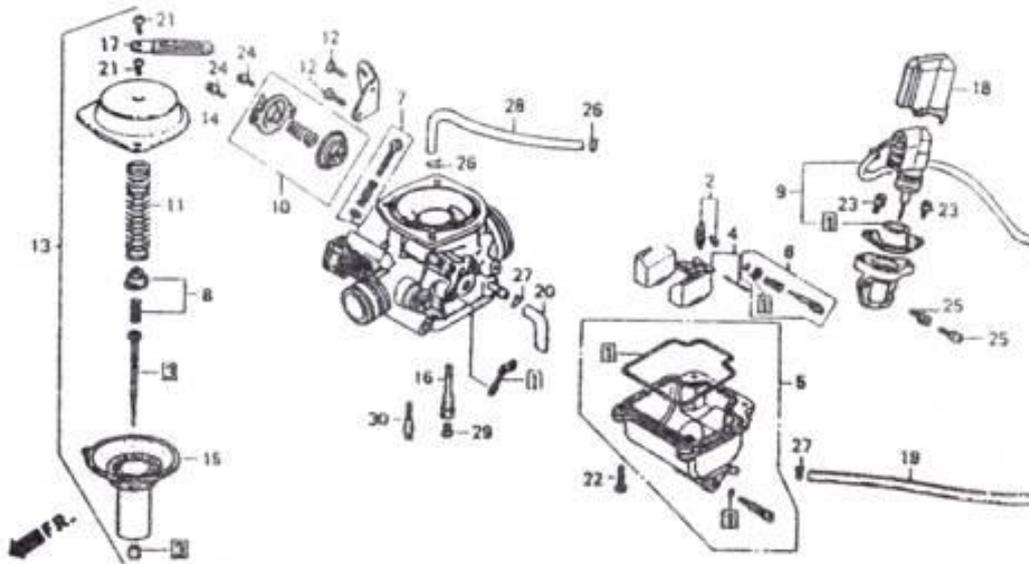


E-5 Carburetor

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
28	E0528	TUBE 3.5X210	1	
29	E0529	JET MAIN #112	1	
30	E0530	JET SLOW #35	1	

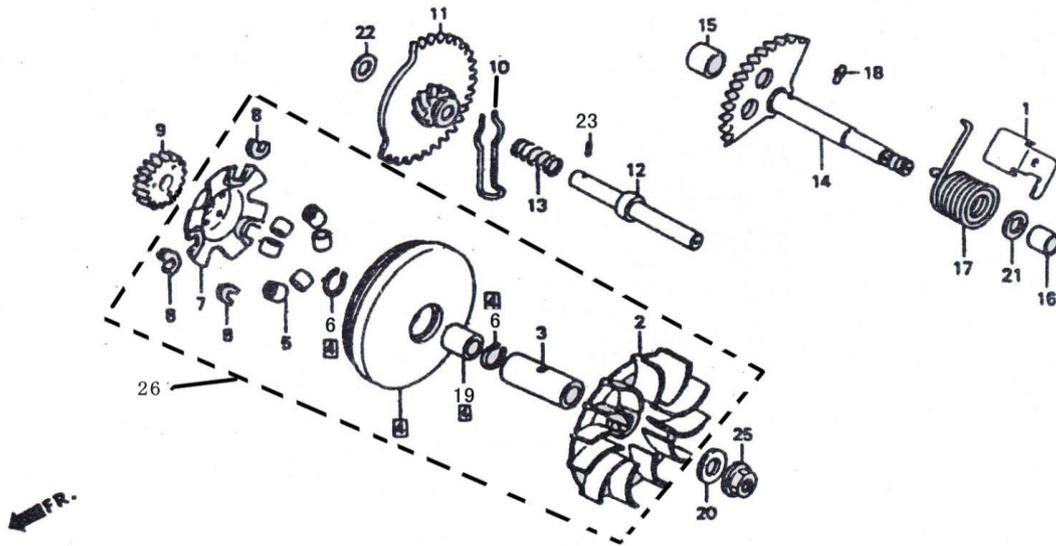


E-6 Drive Pulley

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0601	PLATE KICK RETURN	1	
2	E0602	FACE DRIVE	1	
3	E0603	BOSS DRIVE FACE	1	
4	E0604	FACE COMP MOVABLE	1	
5	E0605	ROLLER SET WEIGHT	6	
6	E0606	CLIP 28MM	2	
7	E0607	PLATE RAMP	1	
8	E0608	POECE SLIDE	3	
9	E0609	GEAR KICK DRIVEN(20T)	1	
10	E0610	SPRING STARTER GEAR	1	
11	E0611	GRAR COMP STARTER	1	
12	E0612	SHAFT STARTER IDEL	1	
13	E0613	SPRING STARTER IDEL	1	
14	E0614	SPINDLE COMP KICK	1	
15	E0615	BUSH 12X16X12	1	
16	E0616	BUSH KICK SPINDLE	1	
17	E0617	SPRING KICK STARTER	1	
18	E0618	PIN SPECIAL 4.5MM	1	
19	E0619	COLLAR DRIVE FACE	1	
20	E0620	WASHER PLAIN 12MM	1	
21	E0621	WASHER 14MM	1	
22	E0622	WASHER 12.5MM	1	
23	E0623	ROLLER 3X8.5	1	
24	E0624	BOLT FLANGE 6X14	1	
25	E0625	NUT FLANGE 12MM	1	
26	E0626	DRIVER ASSY.	1	

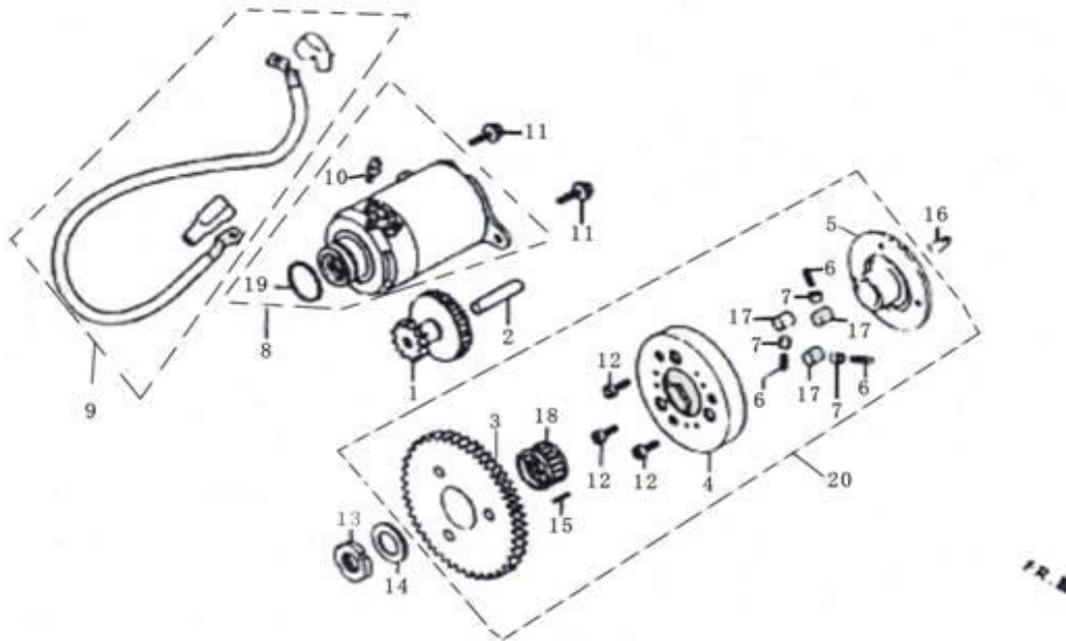


E-7 Starting Motor

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0701	GEAR STARTER	1	
2	E0702	SHAFT STARTER	1	
3	E0703	GEAR COMP STARTING	1	
4	E0704	OUTER COMP STARTING	1	
5	E0705	FLANGE STARTING CLUTCH	1	
6	E0706	SPRING STARTING CLUTCH	3	
7	E0707	CAP STARTING CLUTCH	3	
8	E0708	MOTOR ASSY STARTER	1	
9	E0709	CABLE STARTER MOTOR	1	
10	E0710	SCREW-WASHER 6X12	1	
11	E0711	BOLT FLANGE 6X20	2	
12	E0712	BOLT SOCKET 6X12	3	
13	E0713	NUT LOCK 22MM	1	
14	E0714	WASHER THRUST 18X31X1	1	
15	E0715	PIN DOWEL 5X6	1	
16	E0716	KEY WOODRUFF 15X14X4	1	
17	E0717	ROLLER 10X10	3	
18	E0718	BEARING NEEDLE 28X32X17	1	
19	E0719	O-RING 24.4X3.1	1	
20	E0720	TRANSCEND CLUTCH	1	

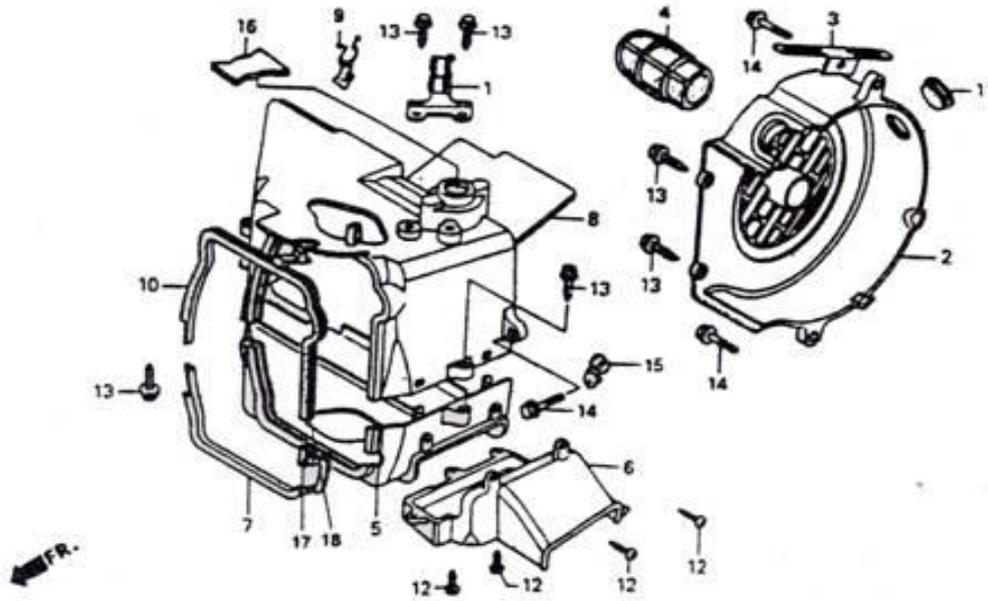


E-8 Fan Cover-Shroud

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0801	CLAMPER BREATHER TUBE	1	
2	E0802	COVER COMP FAN	1	
3	E0803	CLAMPER STARTER CABLE	1	
4	E0804	DUCT CARBURETOR COOLING	1	
5	E0805	SHROUD A	1	
6	E0806	DUCT SHROUD	1	
7	E0807	SEAL SHROUD(A)	1	
8	E0808	SHROUD COMP B	1	
9	E0809	CLIP HIGH TENSTON CORD	1	
10	E0810	SEAL SHROUD(B)	1	
11	E0811	CROMMET B SIDE PANEL	1	
12	E0812	SCREW TAPPING 5X12	5	
13	E0813	SCREW TAPPING 5X16	6	
14	E0814	BOLT FLANGE 6X25	3	
15	E0815	CLAMPER OVER FLOW HOSE	1	
16	E0816	GROMMET SHROUD(B)	1	
17	E0817	SEAL SHROOD	1	
18	E0818	SEAL SHROOD	1	

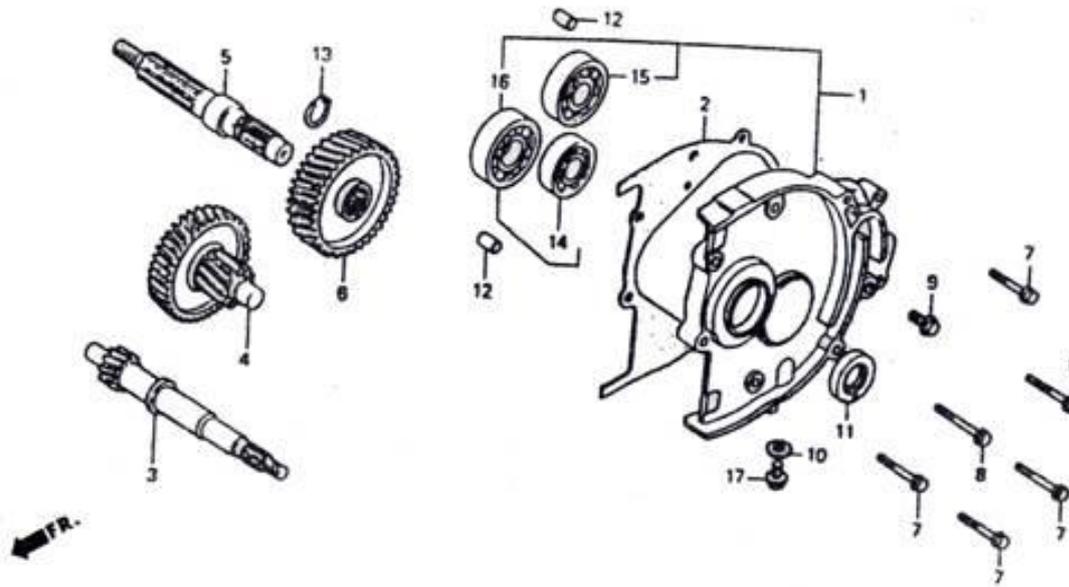


E-9 Transmission

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E0901	COVER MISSION ASSY	1	
2	E0902	GASKET MISSION COVER	1	
3	E0903	SHAFT DRIVE	1	
4	E0904	SHAFT COMP COUNTER	1	
5	E0905	SHAFT FINAL	5	
6	E0906	GEAR FINAL	1	
7	E0907	BOLT FLANGE 6X28	3	
8	E0908	BOLT FLANGE 6X35	3	
9	E0909	BOLT SPECIAL 8MM	2	
10	E0910	WASHER 8MM	1	
11	E0911	OIL SEAL 20X32X6	1	
12	E0912	PIN DOWEL 8X14	2	
13	E0913	CIR CLIP EXTERNAL 20MM	1	
14	E0914	BEARING RADIAL BALL 6202	1	
15	E0915	BRARING RADIAL BALL 6203	1	
16	E0916	BRARING RADIAL BALL 6204	1	

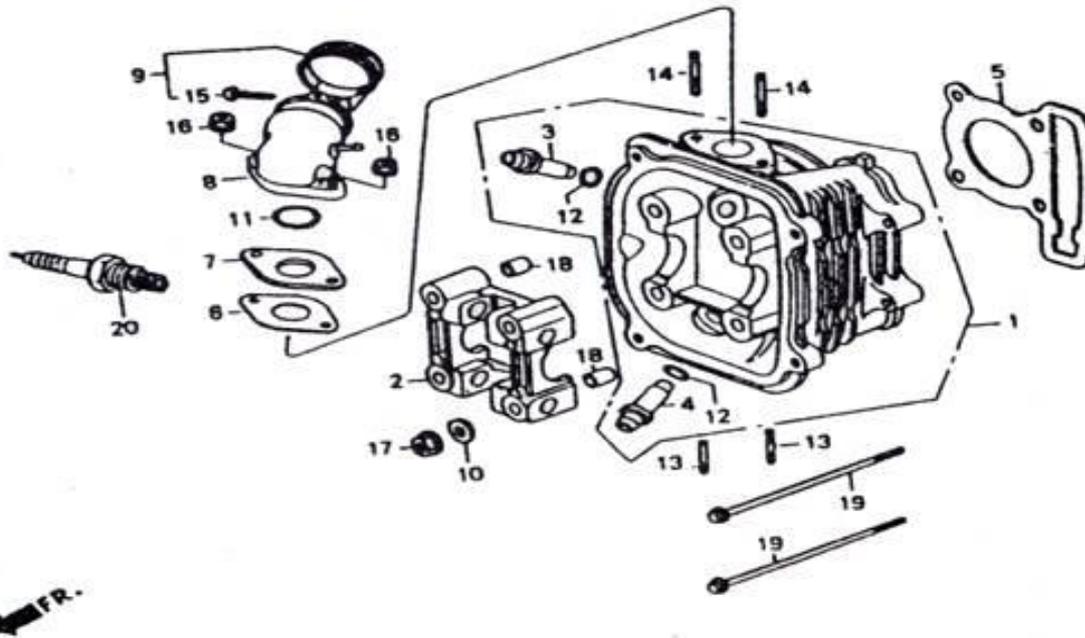


E-10 Cylinder Head

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1001	HEAD COMP CYLINDER	4	
2	E1002	HOLDER CAMSHAFT	1	
3	E1003	GUIDE IN VALVE	1	
4	E1004	GUIDE EX VALVE	1	
5	E1005	GASKER CYLINDER HEAD	1	
6	E1006	GASKRT CARBURETOR INSULATOR	1	
7	E1007	INSULATOR CARBURETOR	20	
8	E1008	PIPE COMP IN	20	
9	E1009	BAND INSULATOR	1	
10	E1010	WASHER 8MM	4	
11	E1011	O-RING $\phi 27 \times 2.0$	1	
12	E1012	O-RING $\phi 9 \times 1.6$	2	
13	E1013	BOLT 2 STUD 6X18	20	
14	E1014	BOLT STUD 6X50	20	
15	E1015	BOLT FLANGE 4X25	1	
16	E1016	NUT FLANGE 6MM	2	
17	E1017	NUT FLANGE 8MM	4	
18	E1018	PON DOWEL 10X16	4	
19	E1019	BOLT FLANGE 6X10	20	
20	E1020	PLUG SPARK(C7HSA NGK)	1	

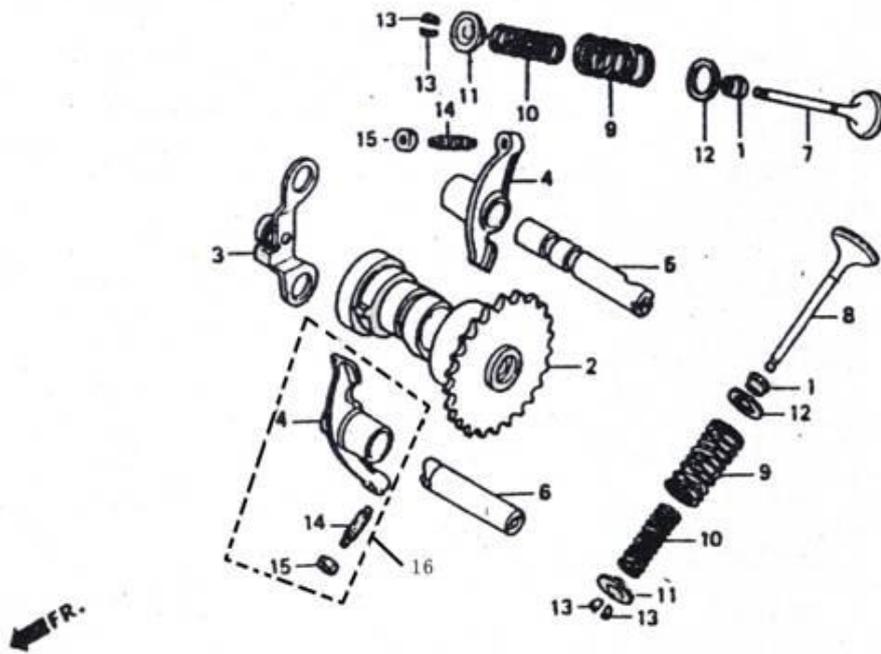


E-11 Camshaft-Valve

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1101	SEAL VALVE STEM	2	
2	E1102	CAMSHAFT COMP	1	
3	E1103	PLATE COMP STOPPER	1	
4	E1104	ARM VALVE ROCKER	2	
5	E1105	SHAFT COMP IN ROCKER ARM	1	
6	E1106	SHAFT EX ROCKER ARM	1	
7	E1107	VALVE IN	1	
8	E1108	VALVE EX	1	
9	E1109	SPRING VALVE OUTER	2	
10	E1110	APRING VALVE INNER	2	
11	E1111	RETAINER VALVE SPRING	2	
12	E1112	SEAT VALVE SPRING OUTER	2	
13	E1113	COTTER VALVE	4	
14	E1114	SCREW TAPPET AD JUSTING	2	
15	E1115	NUT TAPPET AD JUSTING	2	
16	E1116	VALUE ROCKER ASSY.	2	

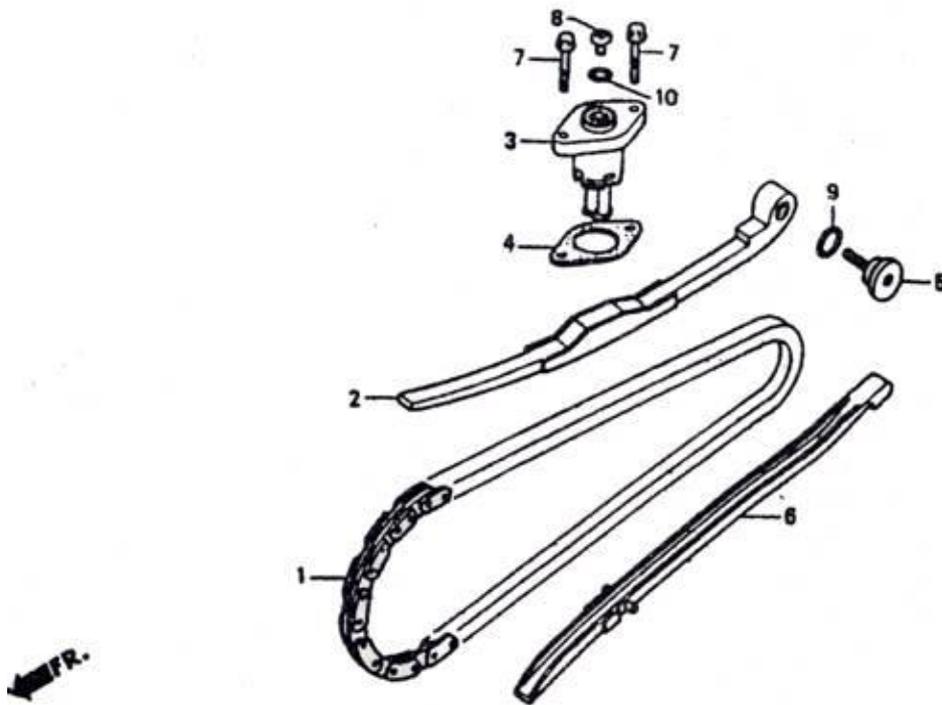


E-12 Cam Chain-Tensioner

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1201	CHAIN CAM	1	
2	E1202	TENSIDNER CAM CHAIN	1	
3	E1203	LIFTER ASSY TENSIONER	1	
4	E1204	GASKET TENSIONER LIFTER	1	
5	E1205	PIVOT CAM CHAIN TENSIONER	1	
6	E1206	GUIDE COMP CAM CHAIN	1	
7	E1207	BOLT FLANG 6x22	2	
8	E1208	SCREW PAN 6x6	1	
9	E1209	O-RING 15.2x1.5	1	
10	E1210	O-RING 1.5x9.5	1	

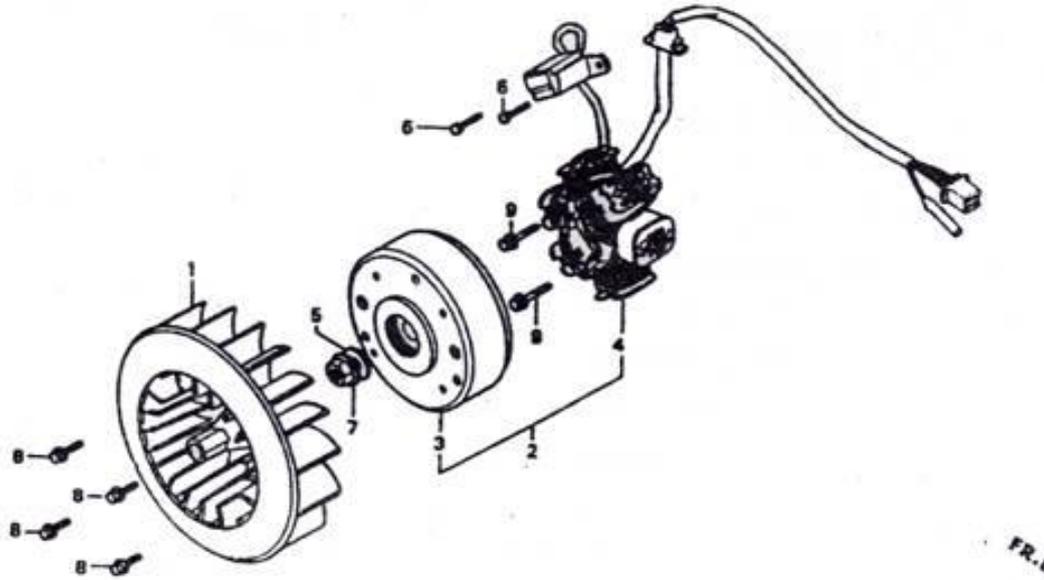


E-13 Generator

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1301	PAN COMP COOLING	6	
2	E1302	GENERATOR ASSY FLYWHEEL TYPE A.C	1	
3	E1303	FLYWHEEL COMP	1	
4	E1304	STATOR COMP	5	
5	E1305	WASHER PLAIN 12MM	1	
6	E1306	BOLT HEX 5X12	2	
7	E1307	NUT FLANGE 12MM	1	
8	E1308	BOLT FLANGE 6X18	4	
9	E1309	BOLT FLANGE 6X20	2	

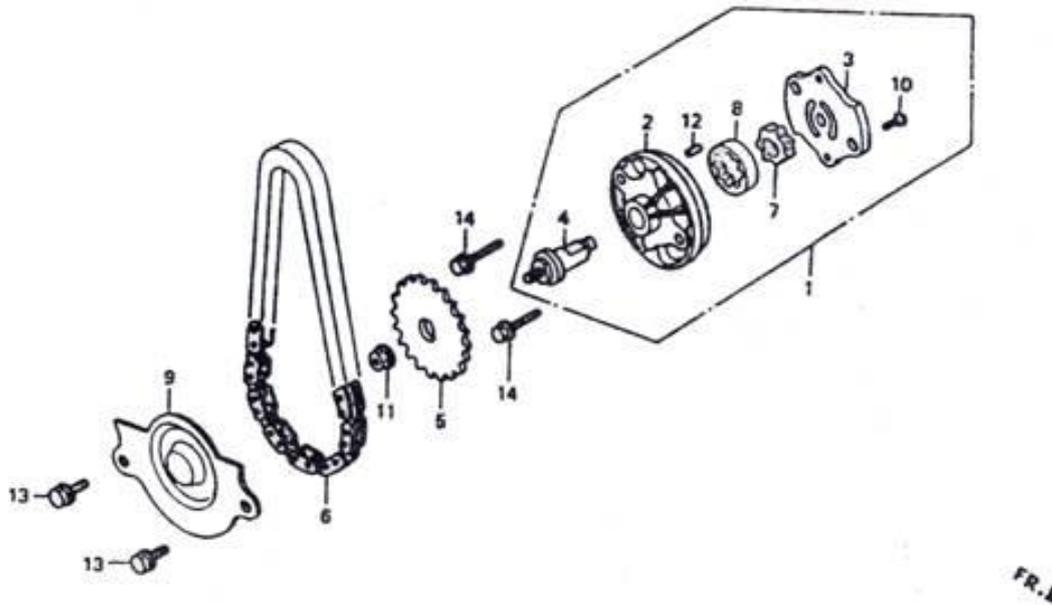


E-14 Oil pump

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1401	PUMP ASSY OIL	1	
2	E1402	BODY OIL PUMP	1	
3	E1403	PLATE OIL PUMP	1	
4	E1404	SHAFT OIL PUMP	1	
5	E1405	SPROCKET OIL PUMP DRIVEN	1	
6	E1406	CHAIN OIL PUMP	1	
7	E1407	ROTOR OIL PUMP INNER	1	
8	E1408	ROTOR OIL PUMP OUTER	1	
9	E1409	SEPARTOR OIL	1	
10	E1410	SCREW PAN 3X10	1	
11	E1411	NUT FLANGE 6MM	1	
12	E1412	PON C DOWEL 4X6.5	1	
13	E1413	BOLT FLANGE 6X12	2	
14	E1414	BOLT FLANGE 6X25	2	

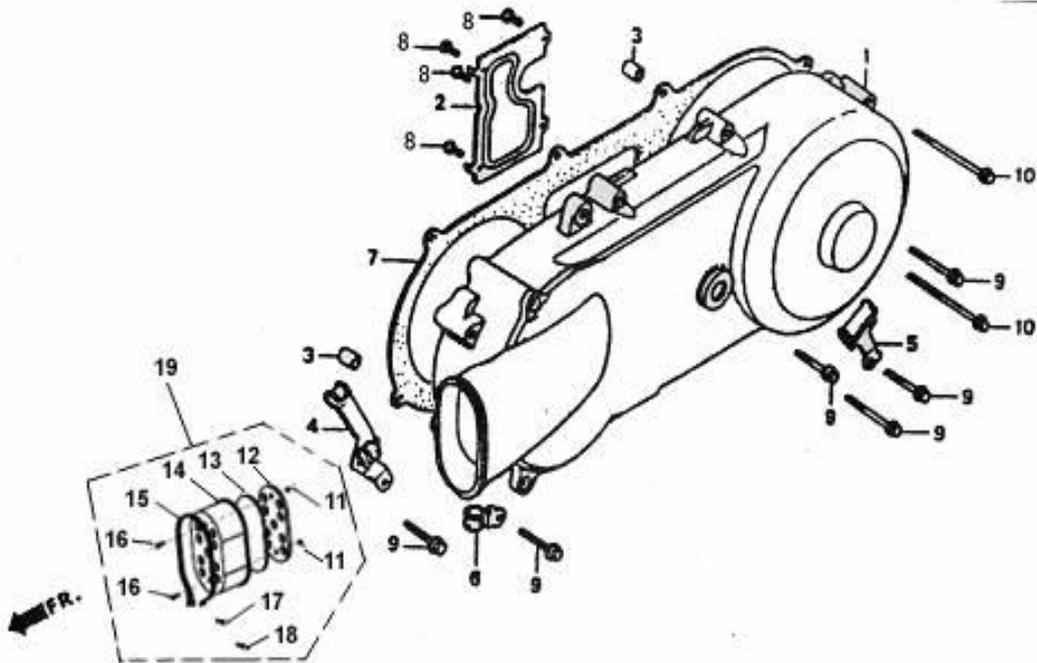


E-15 Left Crankcase Cover

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1501	COVER L	1	
2	E1502	PLATE L COVER	1	
3	E1503	PIN DOWEL 8X14	1	
4	E1504	CLAMPER THROTTLE CABLE	2	
5	E1505	CLAMPER BRAKE CABLE	1	
6	E1506	CLAMPER BREATHER DRAIN TUBE	1	
7	E1507	GASKET L COVER	1	
8	E1508	SCREW TAPPING 4X8	4	
9	E1509	BOLT FLANGE 6X40	6	
10	E1510	BOLT FLANGE 6X65	2	
11	E1511	NUT M4	2	
12	E1512	RUBBER PLATE	1	
13	E1513	SPONGE FILTER	1	
14	E1514	INLET CAP	1	
15	E1515	COLLAR CLAMP	1	
16	E1516	BOLT M4×16	2	
17	E1517	WASHER 4	1	
18	E1518	BOLT M4×35	1	
19	E1519	COVER ASSY, Ventilation	1	

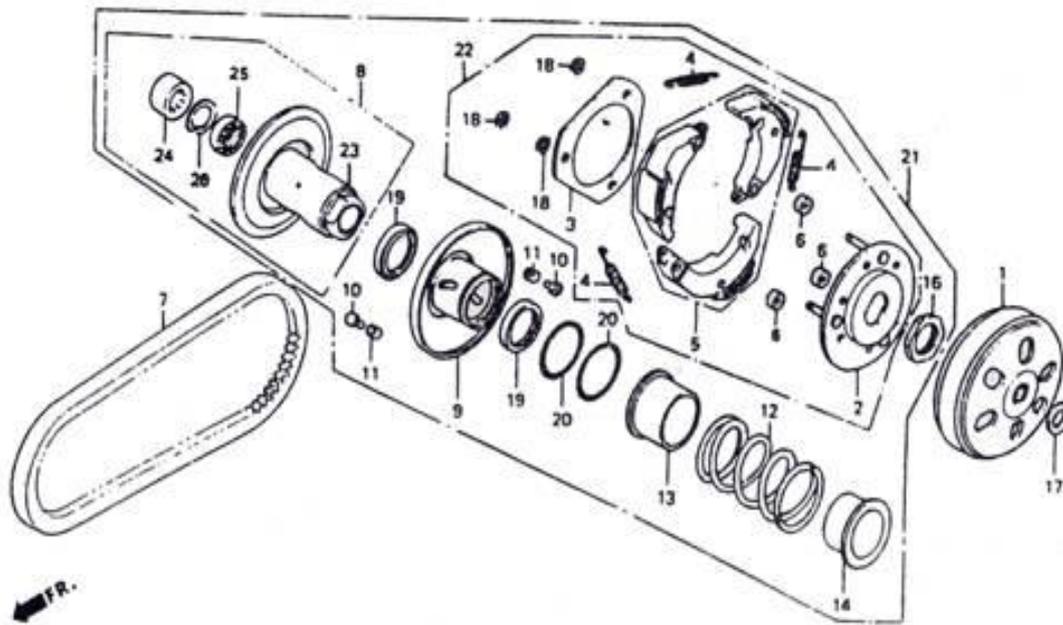


E-16 Driven Pulley

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1601	OUTER CLUTCH	1	
2	E1602	PLATE COMP DRIVE	1	
3	E1603	PLATE CLUTCH SIDE	1	
4	E1604	SPRING CLUTCH	1	
5	E1605	WEIGHT SET CLUTCH	1	
6	E1606	RUBBER CLUTCH DAMPER	3	
7	E1607	BELT DRIVE	1	
8	E1608	FACE ASSY DRIVEN	1	
9	E1609	FACE COMP MOVABLE	1	
10	E1610	PIN ROLLER GUIDE	3	
11	E1611	ROLLER GUIDE	3	
12	E1612	SPRING DRIVEN FACE	1	
13	E1613	COLLAR SEAL	1	
14	E1614	COLLAR SPRING	1	
15	E1615	NUT COMPRESSOR	1	
16	E1616	NUT SPECIAL 28MM	1	
17	E1617	WASHER PLAIN 12MM	3	
18	E1618	CIRCLIP 7MM	3	
19	E1619	SEAL DRIVER FACE	2	
20	E1620	O-RING	2	
21	E1621	PULLEY ASSY DRIVEN	1	
22	E1622	PLATE ASSY DRIVEN	1	
23	E1623	FACE COMP DRIVEN	1	
24	E1624	BEARING NEEDLE 20X29X18	1	
25	E1625	BEARING BALL REDIAL	1	
26	E1626	CIRCLIP IN 28MM	1	

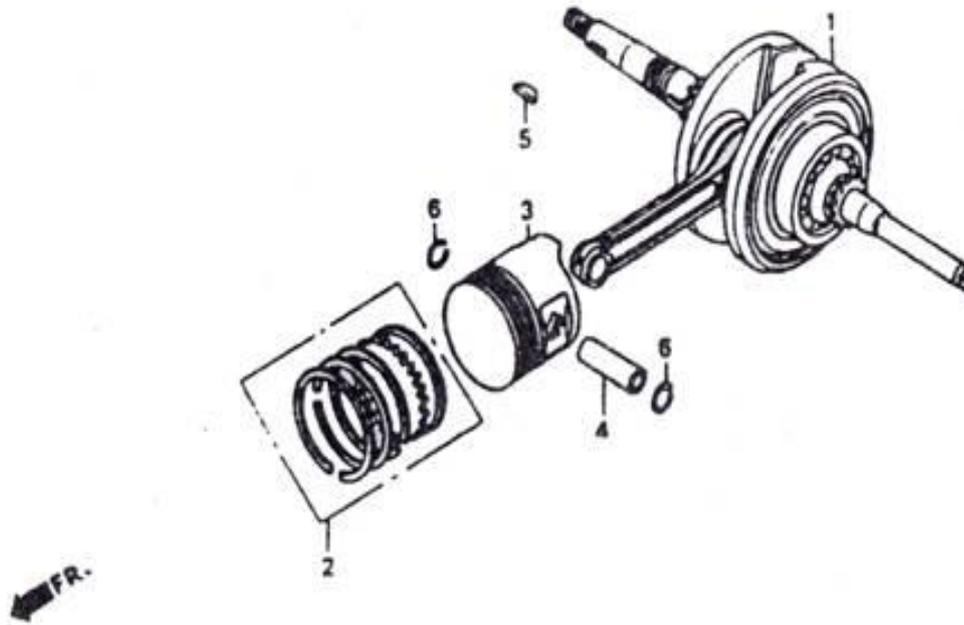


E-17 Crank Shaft-Piston

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	E1701	CRANKSHAFT COMP	1	
2	E1702	RING SET PISTON (STD)	1	
3	E1703	PISTON (STD)	1	
4	E1704	PIN PISTON	1	
5	E1705	KEY WOODRUFF 25X14X4	1	
6	E1706	CLIP PISTON PIN 15MM	2	

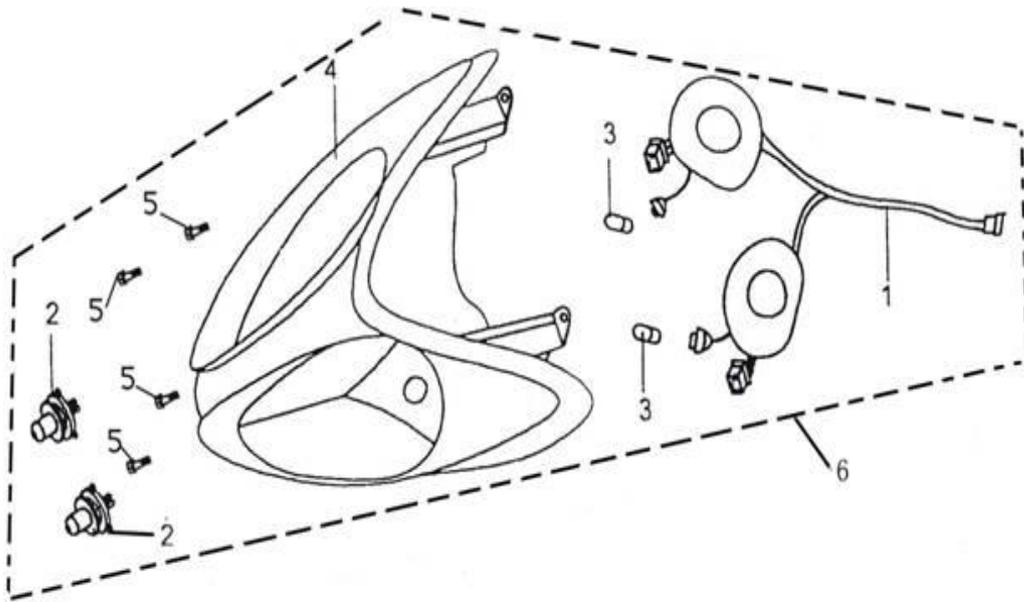


F-01 Headlight

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0101	SOCKET LAMP FR	1	
2	F0102	BULB 12V 18W	2	
3	F0103	BULB 12V 3W	2	
4	F0104	ASSY LAMP WINKER	5	
5	F0105	SCREW ST4.2X16	4	
6	F0106	HEAD LIGHT	1	

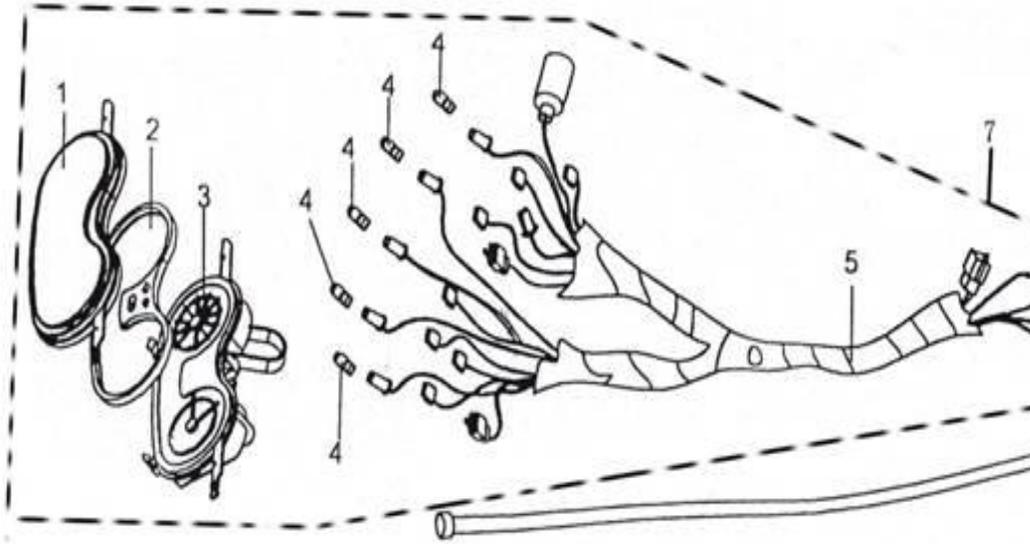


F-02 Meter Assy

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0201	LENS	1	
2	F0202	BOARD MILEAG CABLE	1	
3	F0203	ASSY WINKER MILEAGE	1	
4	F0204	BULB	5	
5	F0205	SUB-CABLE	1	
6	F0206	SOFT AXLE MILEAGE	20	
7	F0207	METER	10	

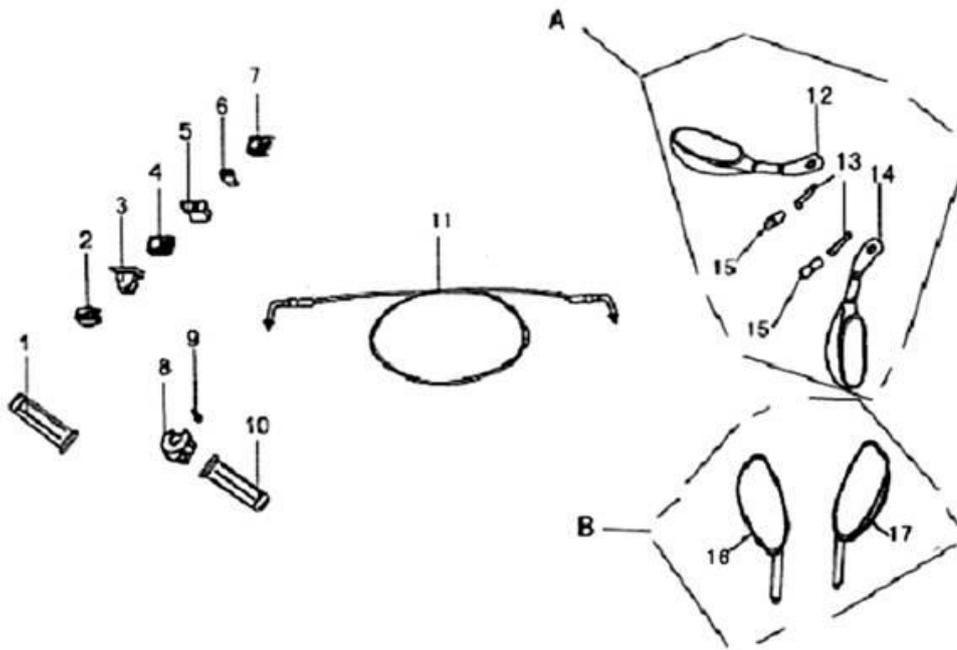


F-03 Switches

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0301	HANDLE LH	1	
2	F0302	SWITCH START	1	
3	F0303	SWITCH PILOT LAMP	1	
4	F0304	SWITCH HORN	1	
5	F0305	SWITCH TURN LAMP	1	
6	F0306	SWITCH FR BRAKE LAMP	1	
7	F0307	SWITCH ILLUMINATION	1	
8	F0308	SOCKET THROTTLE	10	
9	F0309	SCREW M6X20	1	
10	F0310	HANDLE THROTTLE	1	
11	F0311	CABLE THROTTLE	20	
12	F0312	SIGHT MIRROR LH	1	
13	F0313	SCRW M8X40	2	
14	F0314	SIGHT MIRROR LH	1	
15	F0315	COVER BOLT	2	
16	F0316	MIRROR LH	1	
17	F0317	MIRROR RH	1	
A	F03A	SIGHT MIRROR A STATE	1	
B	F03B	SIGHT MIRROR B STATE	1	

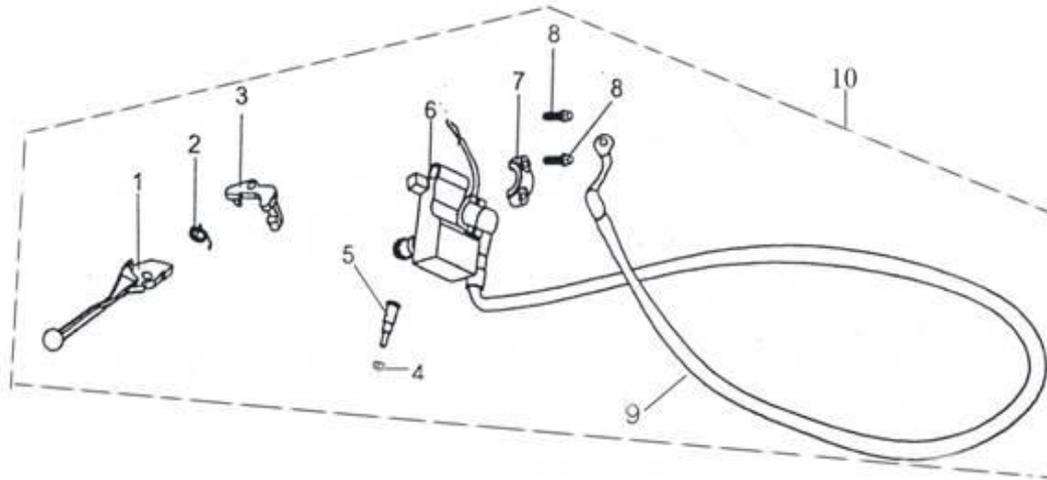

F-04 Front brake master cylinder


REF.NO.	PART NO.	DESCRIPTION		
1	F0401	LEVER		
2	F0402	SPRING RETURN		
3	F0403	CONNECTION PART		
4	F0404	NUT M5		
5	F0405	BOLT LEVER LH		
6	F0406	ASSY FUEL GAUGE FR BRAKE	5	
7	F0407	COVER HALF ROUND		
8	F0408	BOLT M6X22		
9	F0409	PIPE BRAKE		
10	F0410	RIGHT DISK BRAKE , UPPER	5	

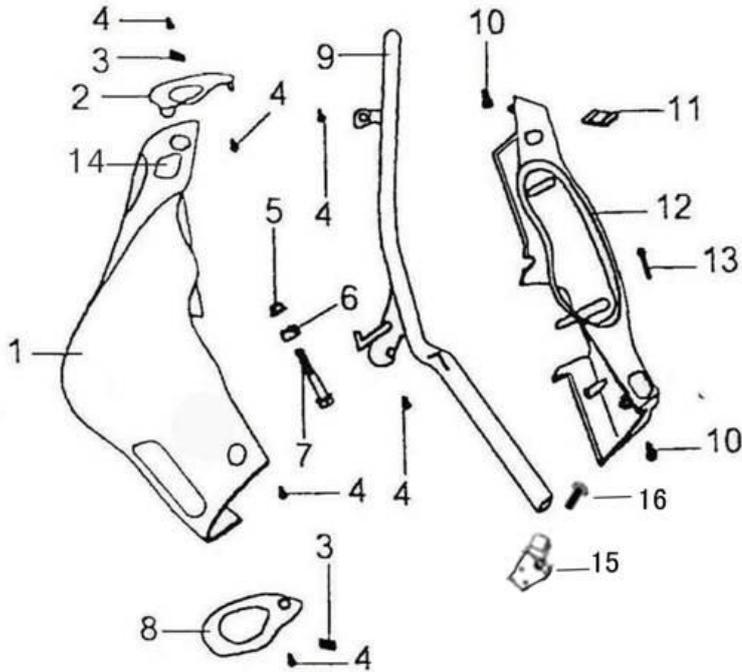

F-05 Steering handle


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0501	WINKER WINDSHIELD SILVER	2	
		WINKER WINDSHIELD BLUE	2	
		WINKER WINDSHIELD RED	2	
2	F0502	SIDE COVER RH WIND WINKER	10	
3	F0503	NUT ST4.2	2	
4	F0504	SCREW ST4.2X12	6	
5	F0505	SELF-LOCK NUT M10	1	
6	F0506	WASHER DIRECTION HANDLE	1	
7	F0507	FLANGE BOLT M10X50	1	
8	F0508	SIDE COVER WINKER WIND LH	10	
9	F0509	HANDLE DIRECTION	5	
10	F0510	ST 4.8X16	2	
11	F0511	FUEL VOLUME VIEW WINDOW	1	
12	F0512	WINKER METER	5	
13	F0513	SCREW M5X25	1	
14	F0514	COVER VIEW HOLE DISK BRAKE	1	
15	F0515	BRACKET, VIEW SIGHT MIRROR LH	1	

16	F0516	BOLT M4×12	1	
----	-------	------------	---	--

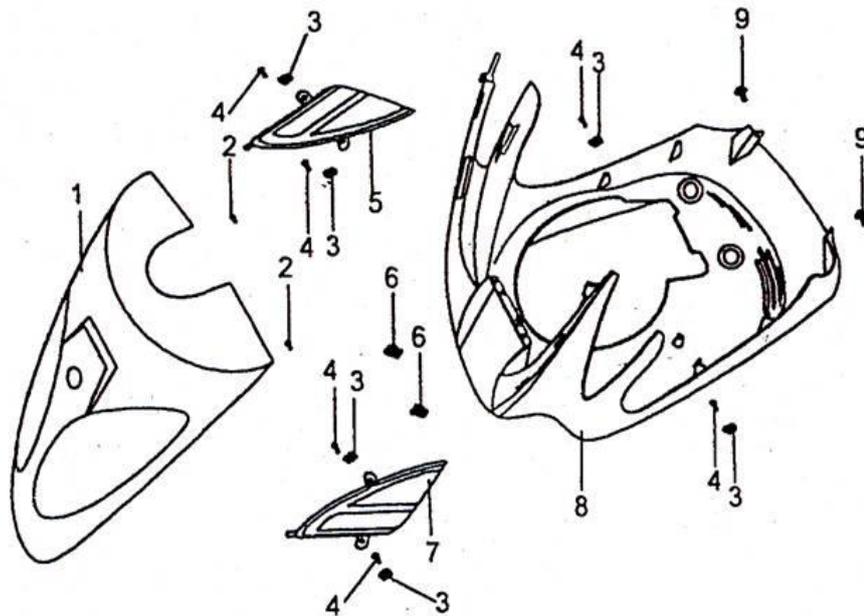


F-06 Front cover

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0601	COVER FR SILVER	2	
		COVER FR BLUE	2	
		COVER FR RED	2	
2	F0602	SCREW ST5X12	2	
3	F0603	NUT ST4	6	
4	F0604	NUT ST5X16	6	
5	F0605	BREATH BOARD RH SIDE FR COVER	10	
6	F0606	NUT M5	2	
7	F0607	BREATH BOARD LH SIDE FR COVER	10	
8	F0608	PROTECTOR FR SILVER	4	
		PROTECTOR FR BLUE	4	
		PROTECTOR FR RED	4	
9	F0609	SCREW M6X16	2	

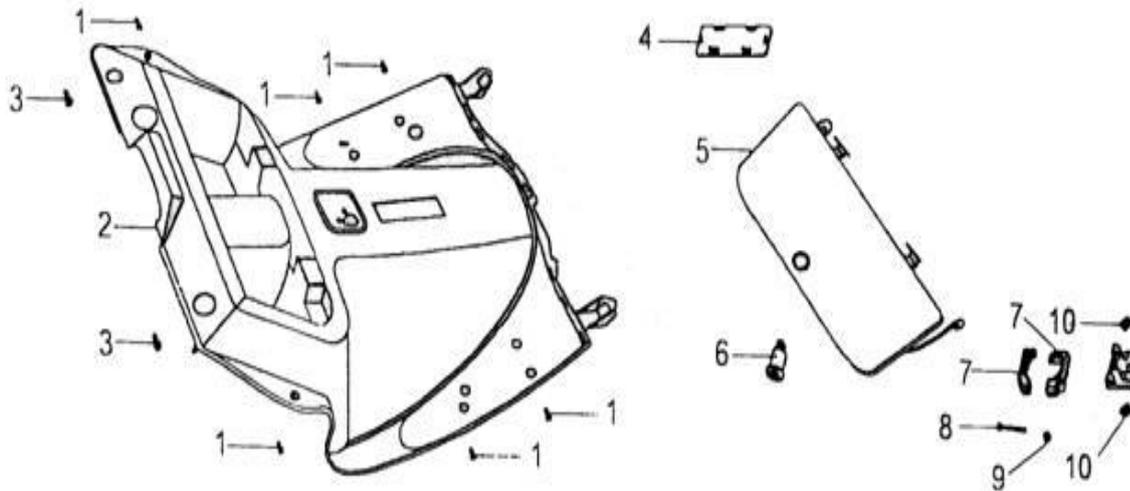


F-07 Front luggage box

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0701	SCREW ST4.2X16	8	
2	F0702	LUGGAGE BOX	15	
3	F0703	SCREW ST5X18	2	
4	F0704	VIN. COVER	10	
5	F0705	COVER FR BOX	15	
6	F0706	LOCK FR BOX	1	
7	F0707	HOOK HELMET	10	
8	F0708	SCREW M5X40	1	
9	F0709	NUT M5	1	
10	F0710	NUT ST4.2	2	
11	F0711	SEAT HOOK HELMET	10	

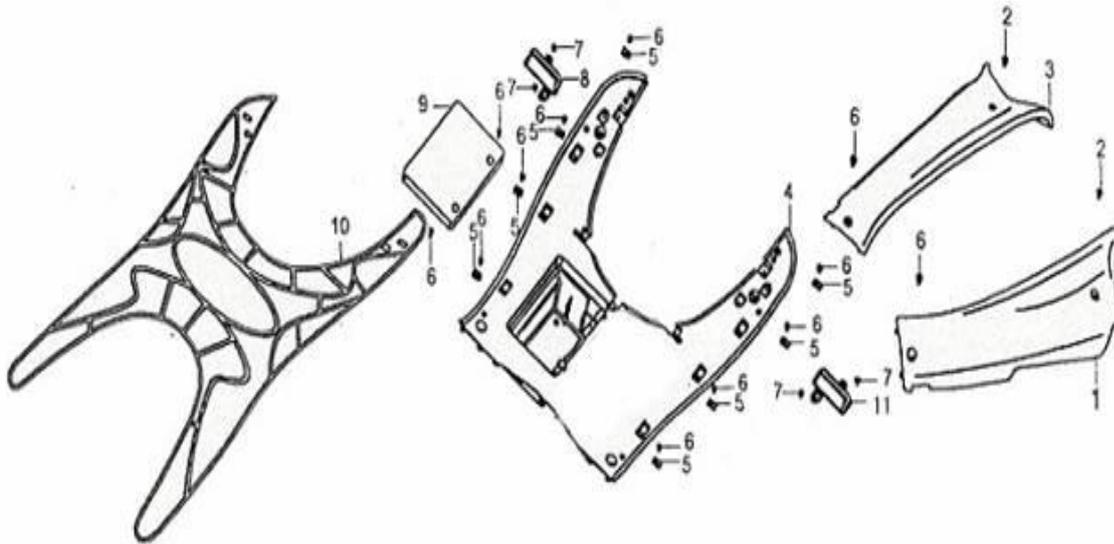

F-08 Floor panel


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0801	PROTECTOR LH SILVER	5	
		PROTECTOR LH BLUE	5	
		PROTECTOR LH RED	5	
2	F0802	ST 4.2X16	2	
3	F0803	PROTECTOR RH SILVER	5	
		PROTECTOR RH BLUE	5	
		PROTECTOR RH RED	5	
4	F0804	PEDAL	10	
5	F0805	NUT ST4.8	8	
6	F0806	SCREW ST4.8X16	12	
7	F0807	SCREW ST4.8X13	4	
8	F0808	COVER PEDAL RH RR	10	
9	F0809	COVER BATTERY	5	
10	F0810	BUSH PEDAL	5	
11	F0811	COVER PEDAL LH RR	10	

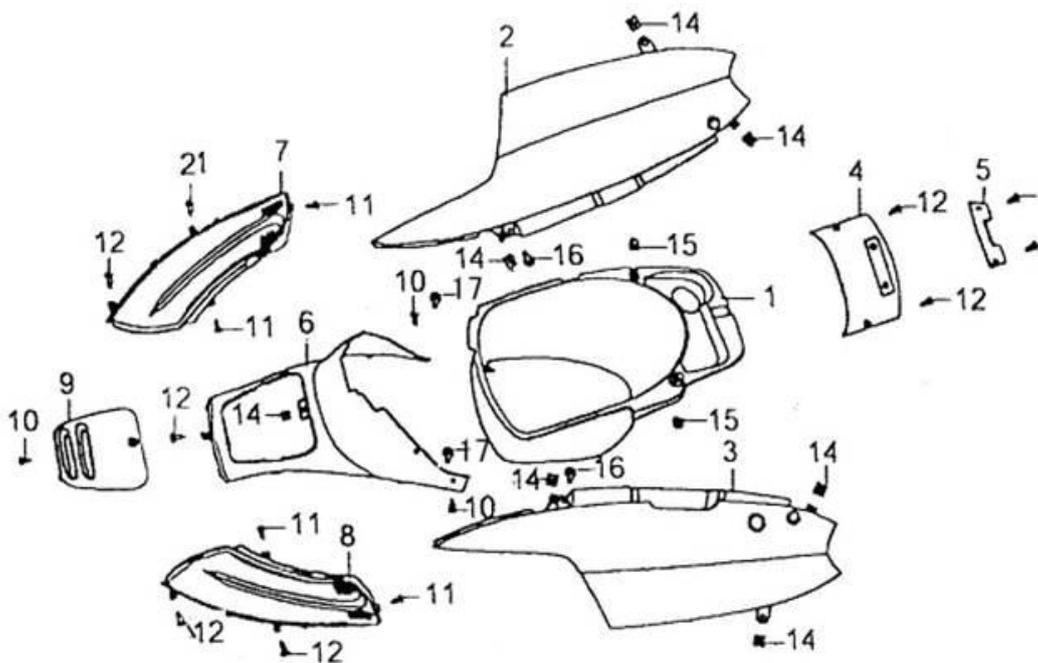

F-09 Luggage case & Rear cover

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F0901	BOX	1	
2	F0902	BOARD ADORN RH	1	
3	F0903	BOARD ADORN LH	1	
4	F0904	ADORN BOARD RR MID	1	
5	F0905	ADORN BOARD RR SMALL SILVER	3	
		ADORN BOARD RR SMALL BLUE	3	
		ADORN BOARD RR SMALL RED	3	
6	F0906	LUGGAGE BOX FR COVER	5	
7	F0907	ADORN BOARD RH SMALL	5	
8	F0908	ADORN BOARD LH SMALL	5	
9	F0909	LID BOX FR COVER	5	


10	F0910	ST 4.2X16	3	
11	F0911	ST 4.2X16	4	
12	F0912	ST 4.2X16	7	
13	F0913	ST4.2X16	2	
14	F0914	NUT ST4.8	7	
15	F0915	NUT M5	2	
16	F0916	BOLT M6X12	2	
17	F0917	BOLT M6X16	2	

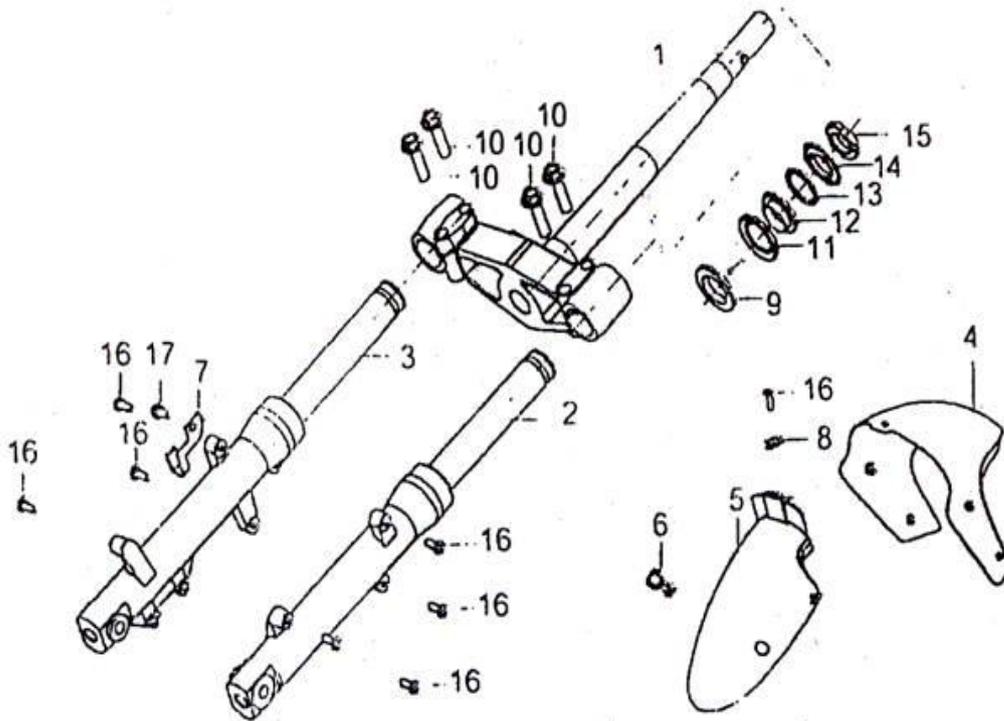

F-10 Front Fork

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1001	ASSY WELD DIRECTION POLE	5	
2	F1002	ABSORBER FR LH	1	
3	F1003	ABOSRBER FR RH	1	
4	F1004	FORESIDE FR FENDER SILVER	5	
		FORESIDE FR FENDER RED	5	
		FORESIDE FR FENDER BLUE	5	
5	F1005	REARWARD FR FENDER	1	
6	F1006	LINE RING	1	


7	F1007	SET CLIP	1	
8	F1008	NIP M6	1	
9	F1009	BEARING LOWER	1	
10	F1010	BOLT M10X40	4	
11	F1011	COVER UPPER BALL LOW	1	
12	F1012	COVER LOWER BALL UP	1	
13	F1013	STEELBALL UPPER	26	
14	F1014	UPPER COVER BALL UP	1	
15	F1015	NUT STEERING COLUMN	1	
16	F1016	NUT M6X12	7	
17	F1017	NUT M6X12	1	

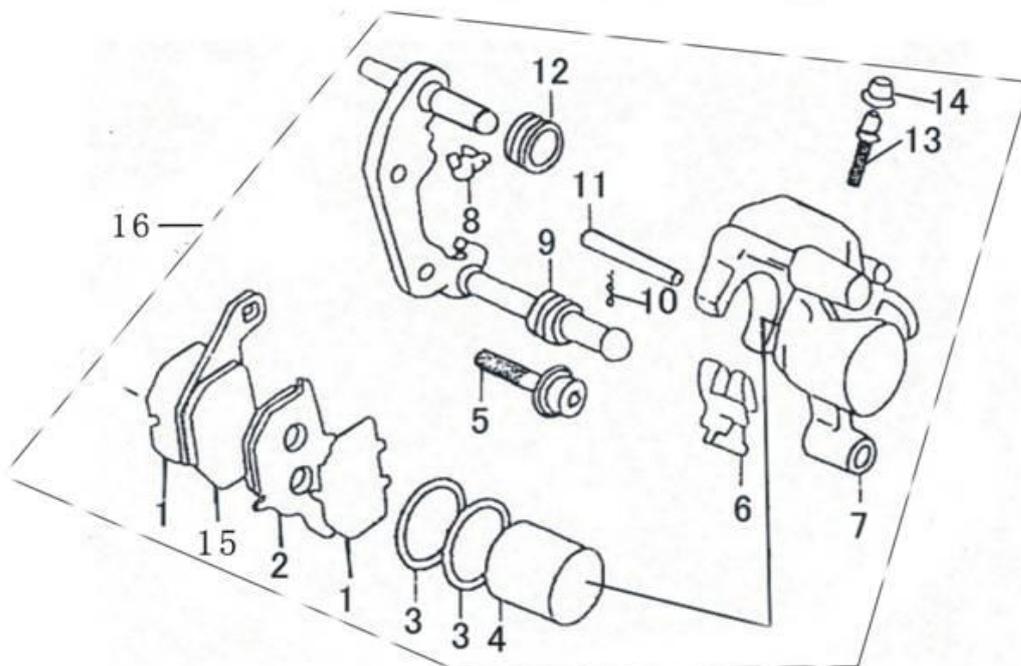

F-11 Front break caliper

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1101	WASHER	2	
2	F1102	BASE	20	
3	F1103	SEAL FUEL	2	
4	F1104	PISTON	1	
5	F1105	BOLT BRAKE TONGS	2	
6	F1106	REED	1	
7	F1107	SUB-FUEL GAUGE BODY	1	
8	F1108	LEAD	1	
9	F1109	INSULATOR	1	
10	F1110	NIP	1	


11	F1111	PIN	1	
12	F1112	COVER PROTECT	1	
13	F1113	BOLT DISPLACEMENT	1	
14	F1114	WINKER	1	
15	F1115	PATCH,BRAKE	1	
16	F1116	RIGHT DISK BRAKE , LOWER PUMP	1	

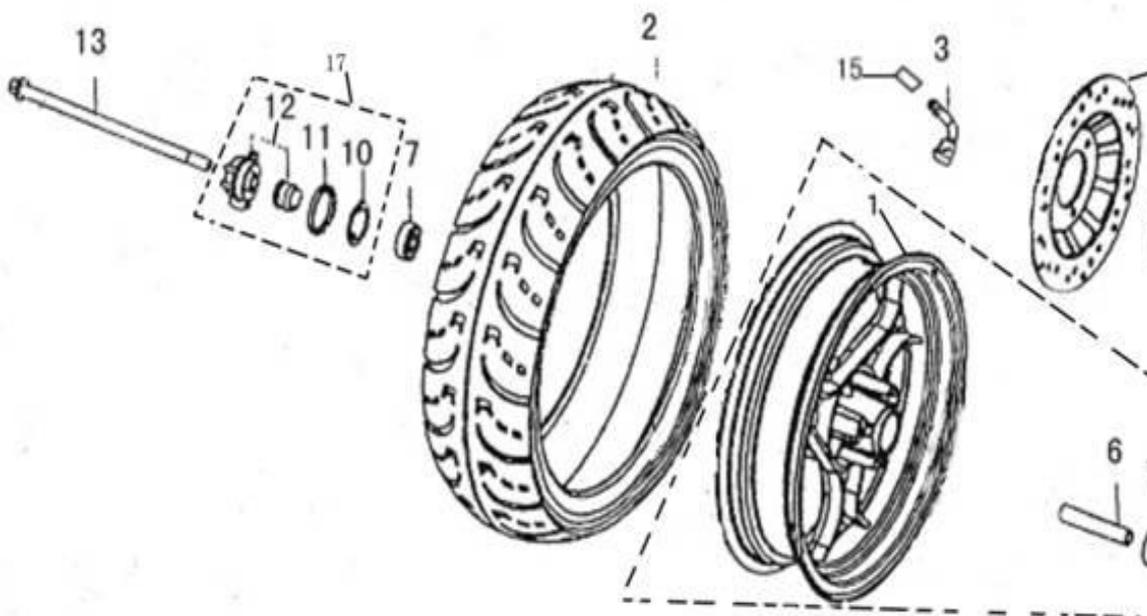

F-12 Front Wheel


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1201	RIM FR WHEEL	1	
2	F1202	OUTSIDE TIRE FR	1	
3	F1203	MOUTH VALVE	1	
4	F1204	DISK BRAKE FR	1	
5	F1205	BOLT M8X25	3	
6	F1206	LEVER FR WHEEL AXLE	1	
7	F1207	BEARING 6301	2	
8	F1208	SEAL RING	1	
9	F1209	BUSH	1	
10	F1210	TRANSMITTER DRIVE WHEEL	1	
11	F1211	SEAL RING	1	
12	F1212	ASSY GEARBOX DRIVE WHEEL	1	

13	F1213	AXLE FR. WHEEL	1	
14	F1214	NUT M12	1	
15	F1215	CAP VALVE	1	
16	F1216	FRONT RIM ASSY.	1	
17	F1217	TRANSMISSION BOX	1	

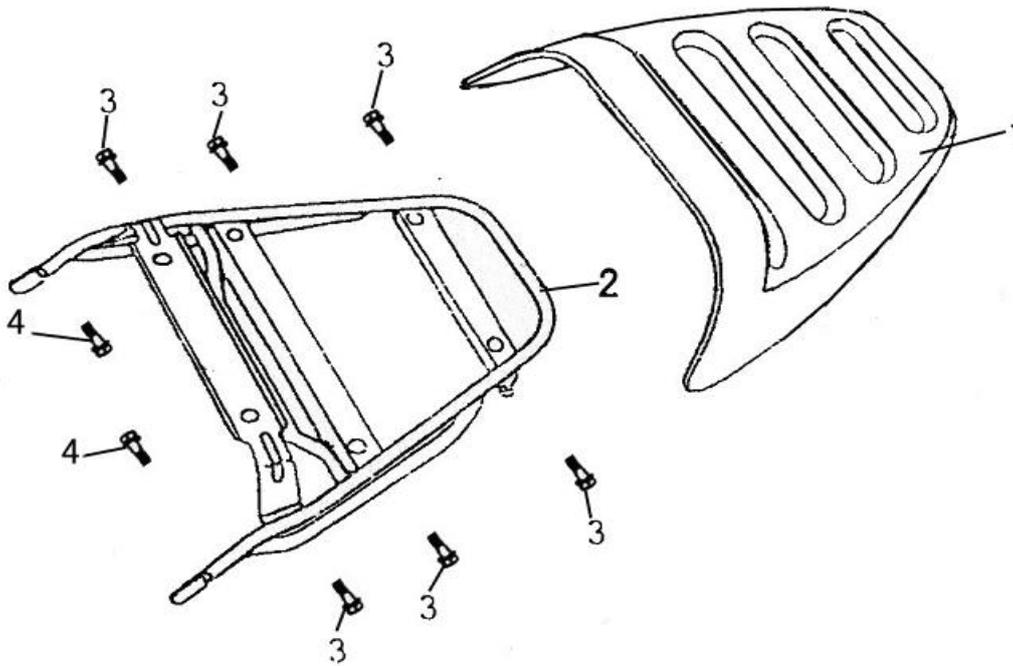


F-13 Floor plate

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1301	WINKER OUTSIDE BRACKET SILVER	3	
		WINKER OUTSIDE BRACKET RED	3	
		WINKER OUTSIDE BRACKET BLUE	3	
2	F1302	BRACKET	5	
3	F1303	NUT M6X12	6	
4	F1304	NUT M8X20	2	

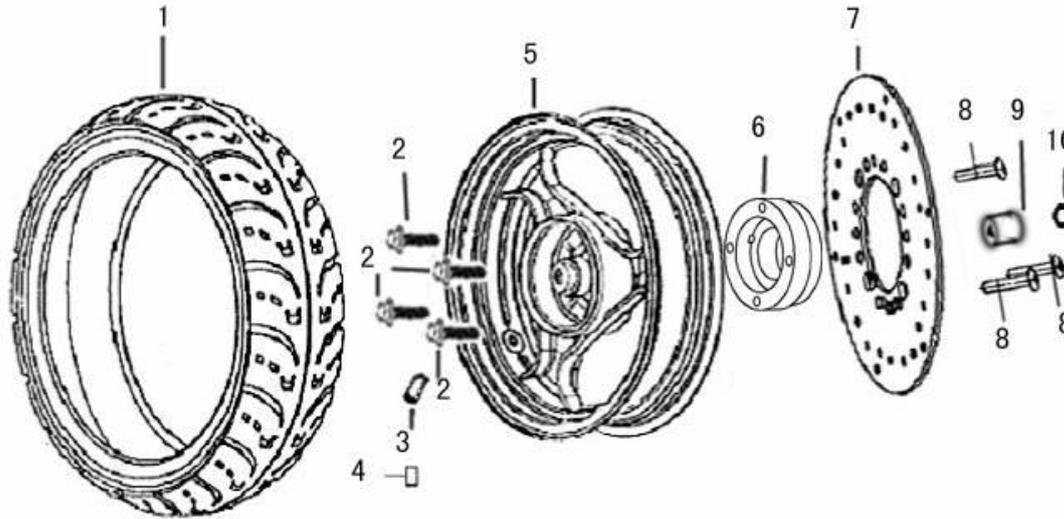

F-14 Rear wheel


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1401	TIRE OUTSIDE	1	
2	F1402	BOLT M10×30	4	
3	F1403	VALVE BREATHER	1	
4	F1404	CAP VALVE	1	
5	F1405	RIM WHEEL RR	2	
6	F1406	FASTEN SEAT DISK BRAKE	4	
7	F1407	DISK BRAKE	4	
8	F1408	BOLT DISK BRAKE	3	
9	F1409	BUSHING	10	
10	F1410	LOCKNUT M16X1.5	1	

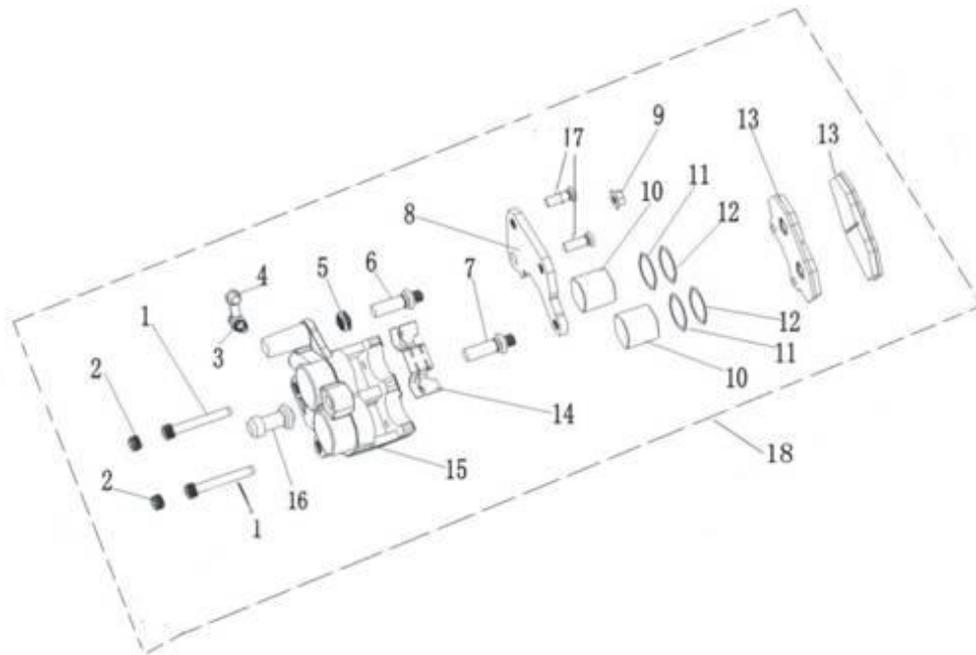

F-15 Rear break caliper

REF.NO.	PARTNO.	DESCRIPTION	Q.T.Y	
1	F1501	BOLT	2	
2	F1502	CHOKE	2	
3	F1503	FUEL DRAIN SCREW PUMP	1	
4	F1504	COVER BOLT FUEL DRAIN	1	
5	F1505	SEALING WASH INSTALL BOARD	1	
6	F1506	AXLE SLIDE UPPER	1	
7	F1507	AXLE SLIDE LOWER	1	
8	F1508	INSTALL BOARD	1	
9	F1509	NUT M8	1	
10	F1510	PISTON PUMP	2	
11	F1511	SEALING WASHER I PUMP	2	
12	F1512	SEALING WASHER II PUMP	2	
13	F1513	BRAKE ASSY	40	
14	F1514	LOCATION SHEET BRAKE PAD	1	
15	F1515	PUMP BODY	1	


16	F1516	AMORTIZE BUSH	1	
17	F1517	BOLT M8X30	2	
18	F1518	LEFT DISK BRAKE , LOWER PUMP	10	

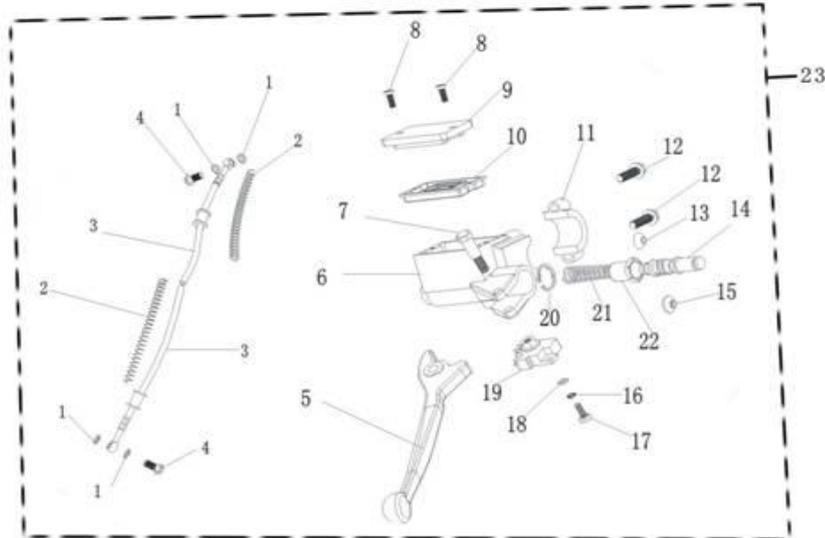

F-16 Rear break master cylinder


REF.NO.	PARTNO.	DESCRIPTION	Q.T.Y	
1	F1601	WASHER COPPER	4	
2	F1602	REED	2	
3	F1603	BRAKE FUEL PIPE ASSY	10	
4	F1604	BOLT FUEL PIPE	2	
5	F1605	BRAKE HANDLE LEVER	1	
6	F1606	PUMP UPPER BRAKE	1	
7	F1607	BOLT	1	
8	F1608	BOLT M4X10	2	
9	F1609	COVER WHOLE PUMP	1	
10	F1610	MOLD WHOLE PUMP	1	
11	F1611	INSTALLATION SEAT	1	
12	F1612	BOLT M6X22	2	
13	F1613	FRONT RUBBER BOWL,PUMP	1	
14	F1614	PISTON ,WHOLE PUMP	1	
15	F1615	REAR RUBBER BOWL ,PUMP	1	
16	F1616	ELASTIC BUSH	1	

17	F1617	BOLT M4X10	1	
18	F1618	PLAIN WASHER	1	
19	F1619	SWITCH, REAR BRAKE	1	
20	F1620	CHOKE RING	1	
21	F1621	SPRING	1	
22	F1622	SEAL JACKET, BRAKE PISTON	1	
23	F1623	LEFT DISK BRAKE , UPPER	5	

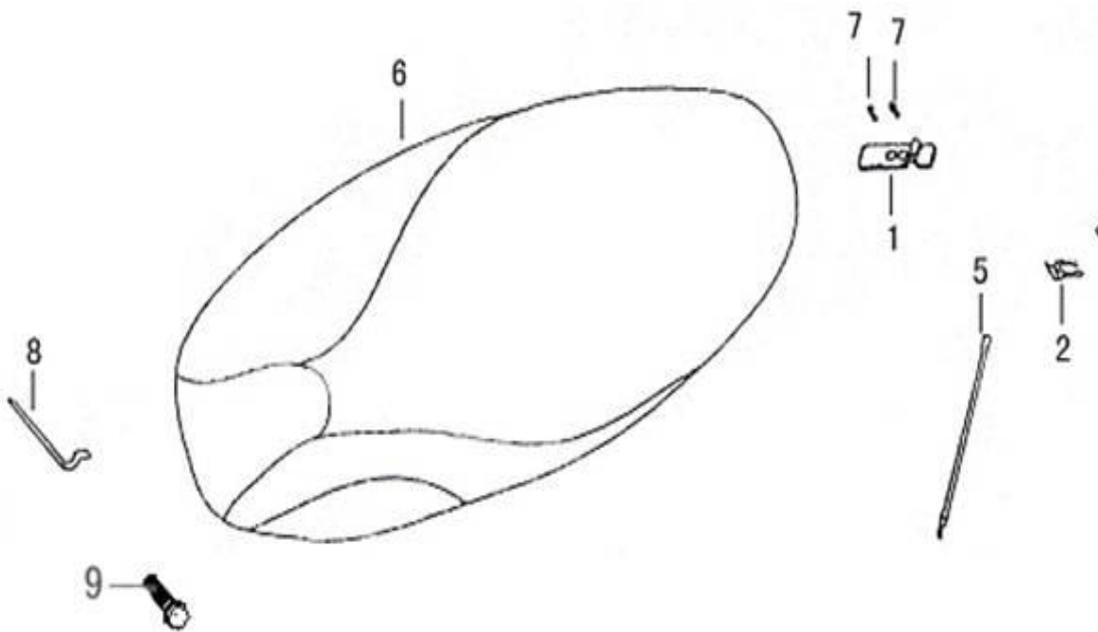


F-17 Seat cushion

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1701	LOCK SEAT, CUSHION	1	
2	F1702	CLICK	1	
3	F1703	LOCK CUSHION	1	
4	F1704	BRACKET CUSHION LOCK	1	
5	F1705	CABLE ,CUSHION	1	
6	F1706	CUSHION	4	
7	F1707	BOLT M16X12	2	
8	F1708	PIN	1	
9	F1709	BOLT M6X12	1	

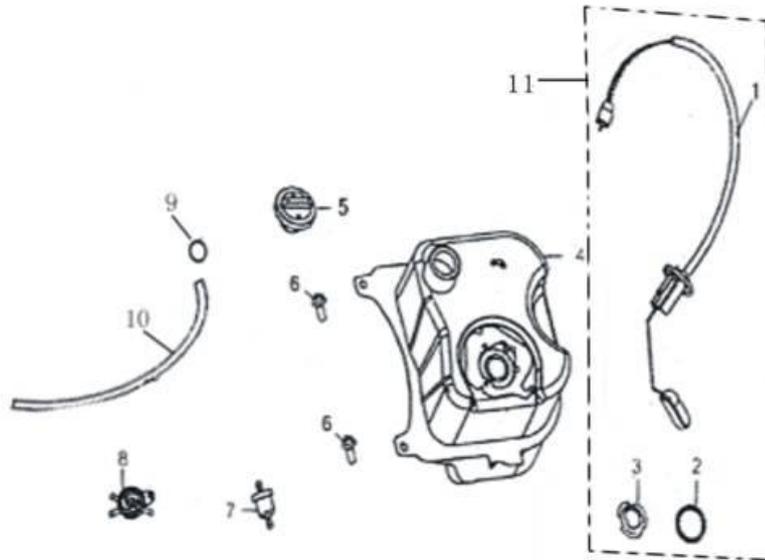


F-18 Fuel Tank

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1801	SENSOR SET,FUEL	1	
2	F1802	SEALING, FUEL SENSOR	1	
3	F1803	LOCATION SHEET ,FUEL	1	
4	F1804	FUEL TANK	1	
5	F1805	FUEL TANK COVER	1	
6	F1806	BOLT M6X12	2	
7	F1807	FUEL FILTER	1	
8	F1808	ABSORBE SWITCH	8	
9	F1809	CLICK RING	1	
10	F1810	OIL PIPE	1	
11	F1811	FUEL SENSOR	1	

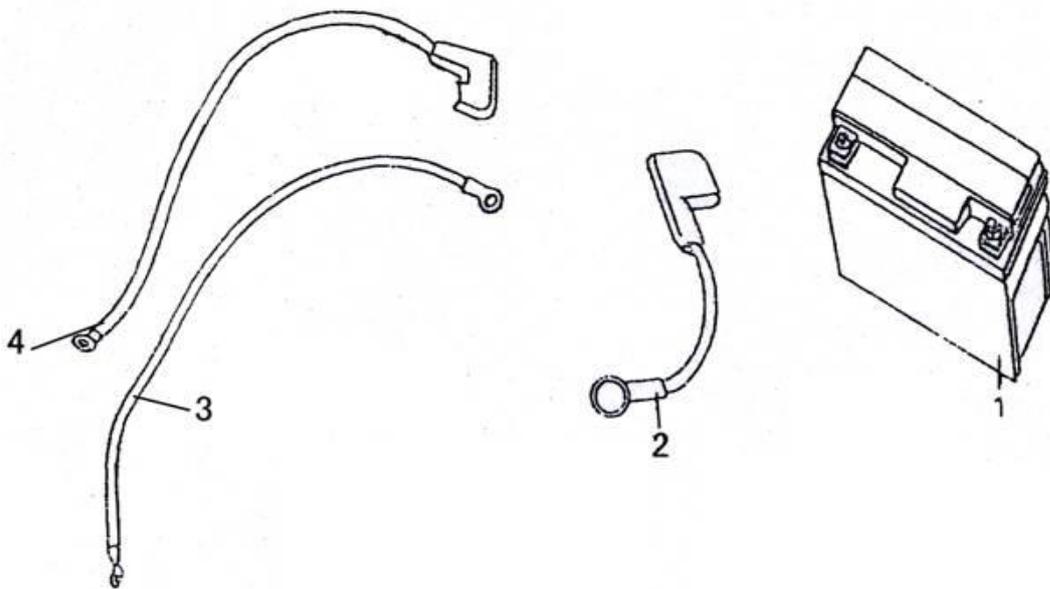


F-19 Battery

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F1901	BATTERY	1	
2	F1902	ANODE CABLE	1	
3	F1903	GROUND CABLE	1	
4	F1904	CATHODE CABLE	1	

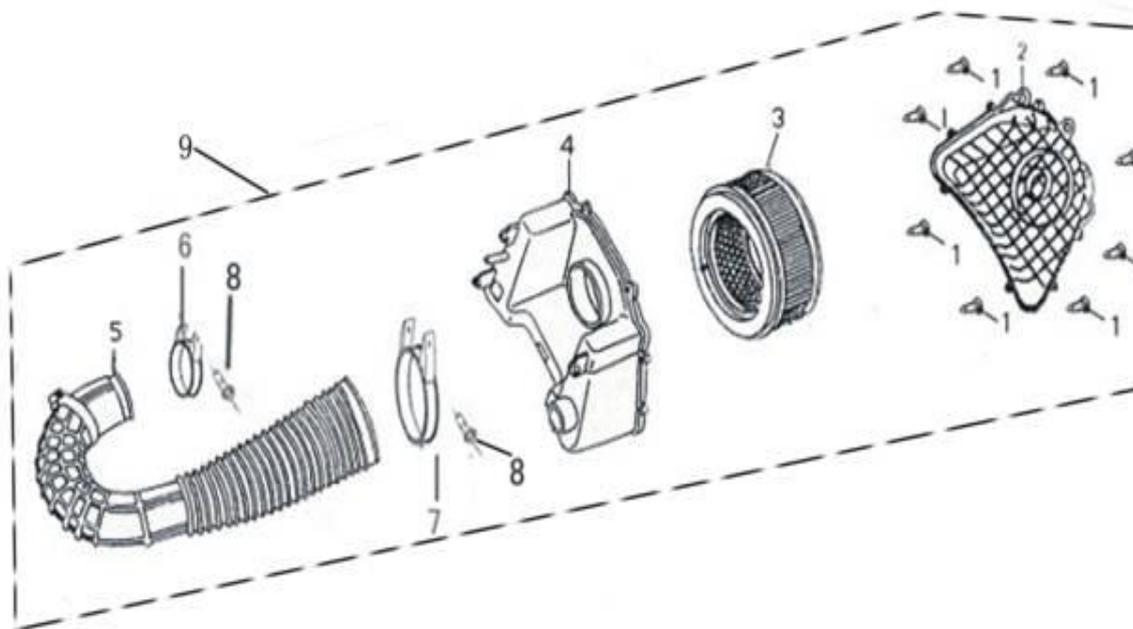

F-20 Air cleaner


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2001	SCREW ST4.2X16	8	
2	F2002	COVER AIR CLEANER	1	
3	F2003	FILTER CORE	1	
4	F2004	SHELL AIR FILTER	1	
5	F2005	PIPE LINKING	1	
6	F2006	CLICK RING 1	1	
7	F2007	CLICK RING 2	1	
8	F2008	BOLT M4X25	2	
9	F2009	AIR CLEANER	1	

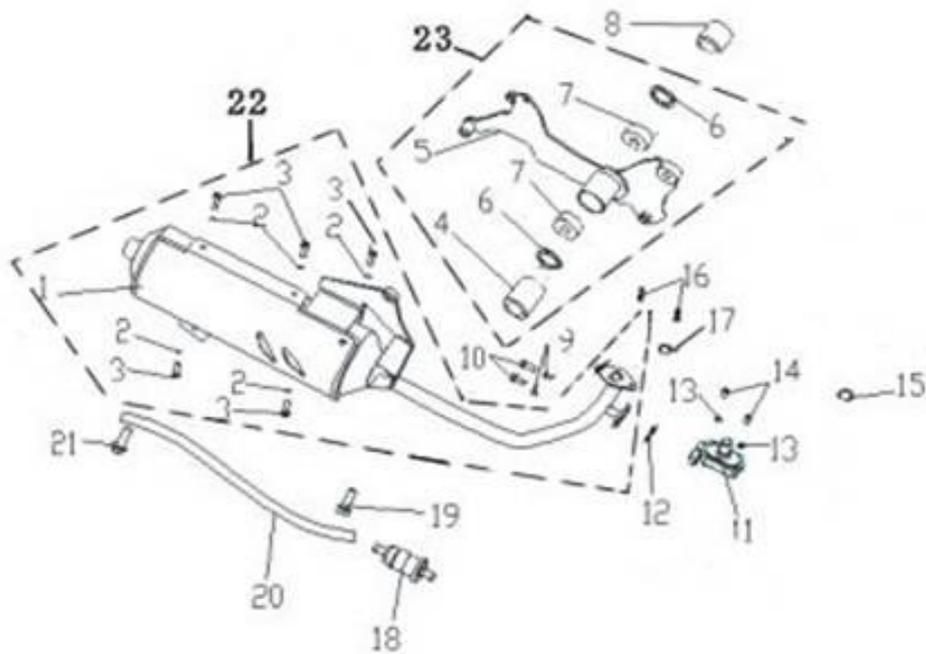

F-21Exhaust Muffler


REF.NO.	PART NO.	DESCRIPTION		
1	F2101	ASSY MUFFLER WELDING		
2	F2102	WASHER SPRING 6		
3	F2103	BOLT M6X12		
4	F2104	BUSHING	20	
5	F2105	LINK BOARD	10	
6	F2106	BLOCK RING	20	
7	F2107	BEARING	20	
8	F2108	BUSHING OUTSIDE	20	
9	F2109	SPRING WASHER 5		
10	F2110	BOLT M6X12		
11	F2111	VALVE 2ND AIR INLET		
12	F2112	WASHER VALVE 2ND AIR		
13	F2113	SPRING WASHER		
14	F2114	SCREW M5X10		
15	F2115	RING ϕ 10		
16	F2116	NUT M6		

17	F2117	ASBESTUS WASHER		
18	F2118	FILTER AIR		
19	F2119	BOLT M8X35		
20	F2120	PIPE 2ND AIR SUPPLY		
21	F2121	BOLT M8X125		
22	F2122	EXHAUST ASSY.	1	
23	F2123	CONNECT	1	

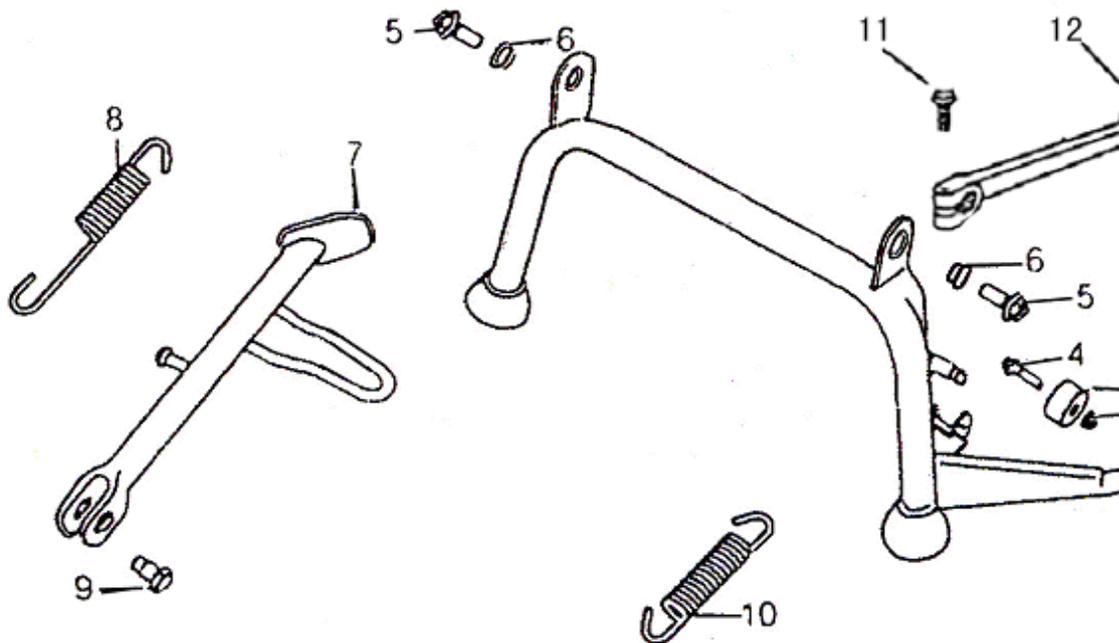


F-22 Stand

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2201	STAND	1	
2	F2202	NUT M6	1	
3	F2203	AMORTIZE WHEEL	1	
4	F2204	BOLT M6X25	1	
5	F2205	BOLT M10X25	2	
6	F2206	BUSHING PARKING FRAME	2	
7	F2207	SINGLE STAND	1	
8	F2208	SPRING SINGLE STAND	1	
9	F2209	BOLT SINGLE STAND	1	
10	F2210	SPRING PARKING FRAME	1	
11	F2211	BOLT M6X25	1	
12	F2212	START LEVER ENGINE	1	

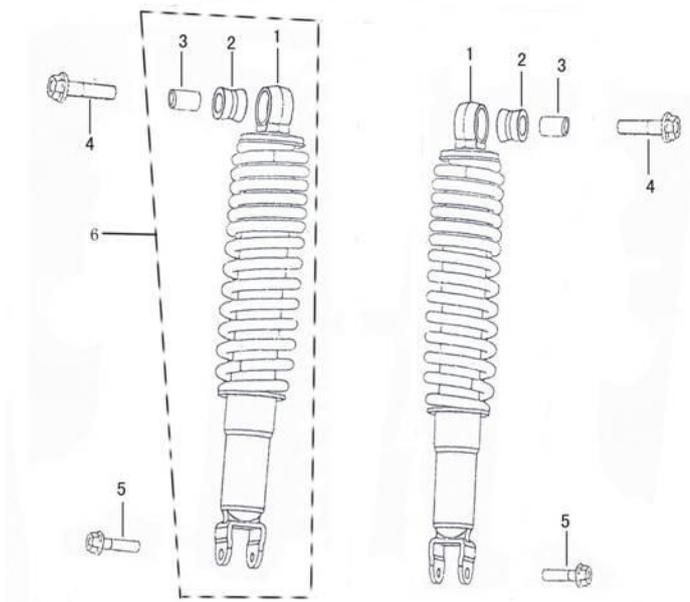


F-23 Rear cushion

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2301	ASSY ABSORBER RR	2	
2	F2302	BUSH ABSORBER RR	20	
3	F2303	BUSH RR ABSORBER	20	
4	F2304	BOLT M10X40	2	
5	F2305	BOLT M8X30	2	
6	F2306	REAR ABSORBER	2	

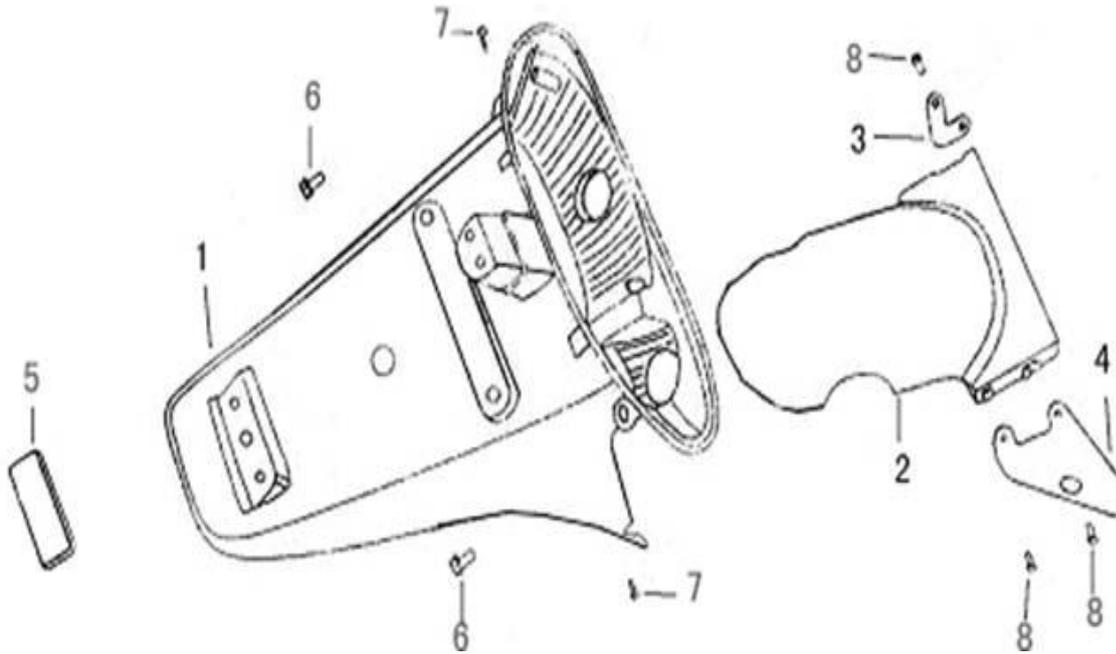


F-24 Rear tender

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2401	FENDER TAIL	1	
2	F2402	FENDER RR WHEEL	10	
3	F2403	STAND LH FENDER RR WHEEL	1	
4	F2404	STAND RH FENDER RR WHEEL	10	
5	F2405	REFLECTOR RR	1	
6	F2406	BOLT M8X16	2	
7	F2407	SCREW ST4.8X16	2	
8	F2408	BOLT M6X12	3	
9	F2409	BOLT M10X45	1	

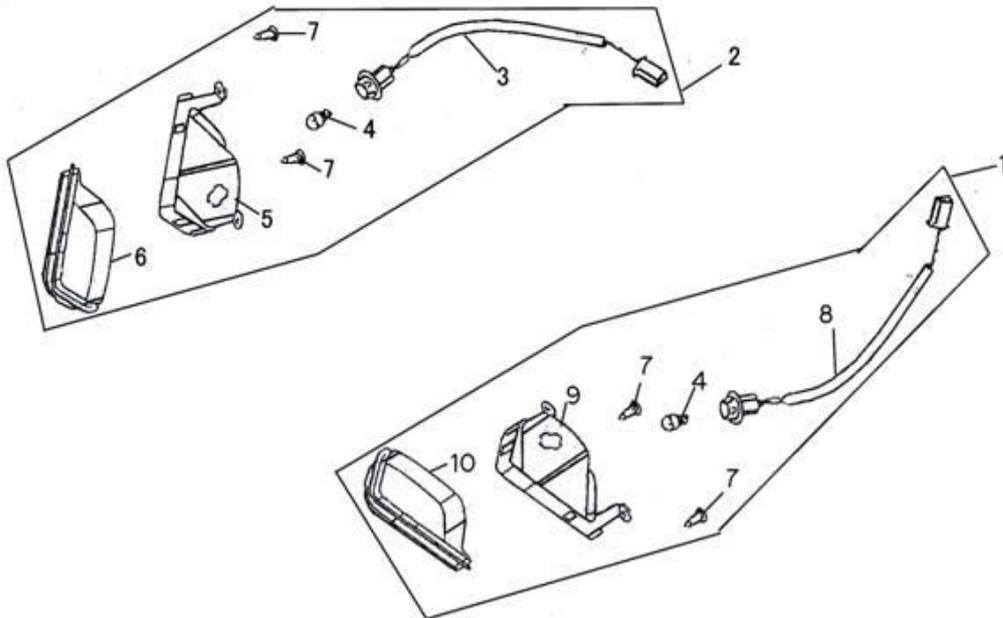


F-25 Winkers

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2501	TURN LAMP FR LH	5	
2	F2502	TURN LAMP FR RH	5	
3	F2503	SOCKET TURN LAMP FR RH	1	
4	F2504	BULB	2	
5	F2505	SHELL TURN LAMP FR RH	1	
6	F2506	WINKER TURN LAMP RH FR	5	
7	F2507	SCREW ST2.9X16	4	
8	F2508	SOCKET TURN LAMP FR LH	1	
9	F2509	SHELL TURN LAMP LH FR	1	
10	F2510	COVER TURN LAMP FR LH	5	

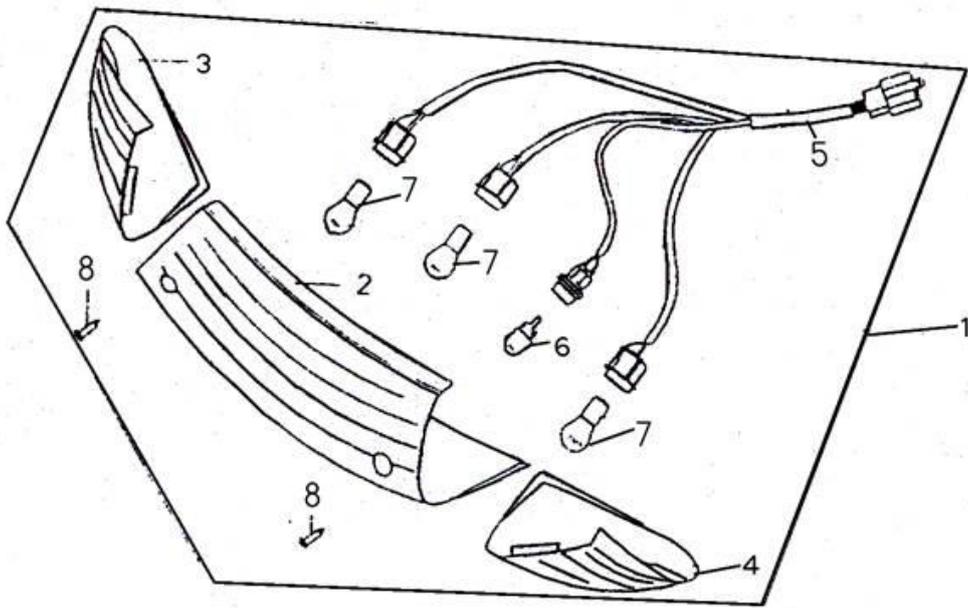

F-26 Taillight


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2601	ASSY TAIL LAMP	1	
2	F2602	WINKER RR LAMP	20	
3	F2603	WINKER TURN LAMP LH RR	20	
4	F2604	WINKER TURN LAMP RH RR	20	
5	F2605	SOCKET TAIL LAMP	1	
6	F2606	BULB 12V5W	1	
7	F2607	BULB 12V 10/5W	3	
8	F2608	BOLT ST4.2X16	2	

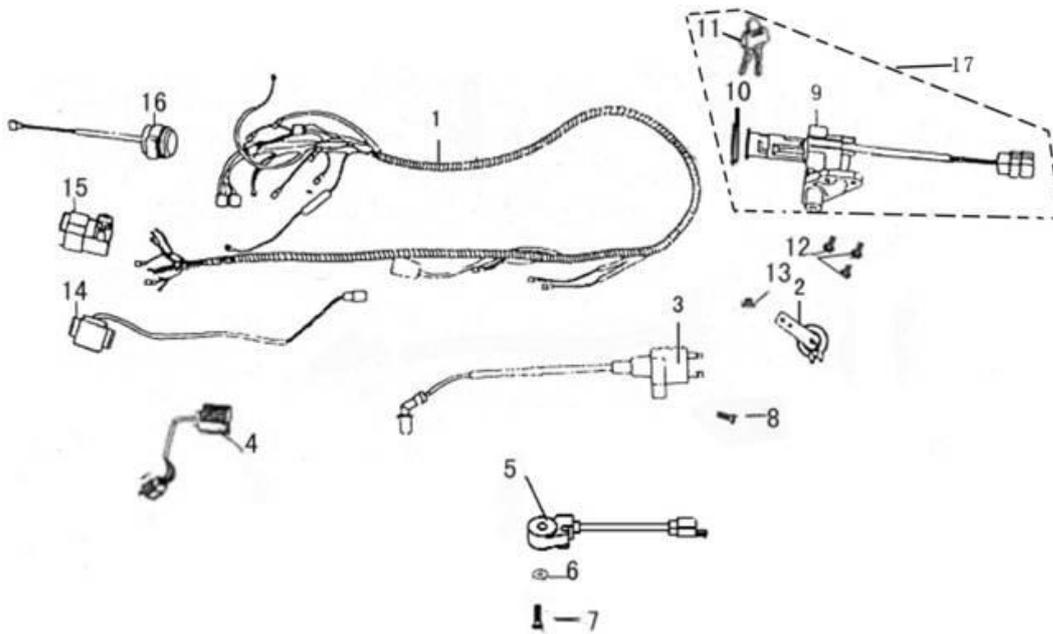

F-27 Wire harness

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2701	MAIN CABLE	2	
2	F2702	HORN	1	
3	F2703	VOLTAGE PACK	1	
4	F2704	MANOSTAT	1	
5	F2705	SWITCH FLAMEOUT STAND	1	
6	F2706	SPRING WASHER 8	1	
7	F2707	BOLT M6X16	1	
8	F2708	BOLT M5X25	1	
9	F2709	LOCK	5	
10	F2710	COVER LOCK	5	
11	F2711	KEY	10	
12	F2712	BOLT M6x8	3	
13	F2713	NUT M6	1	
14	F2714	RELAY	1	
15	F2715	IGNITION	1	
16	F2716	FLASHER	30	


17	F2717	MAIN LOCK	1	
----	-------	-----------	---	--

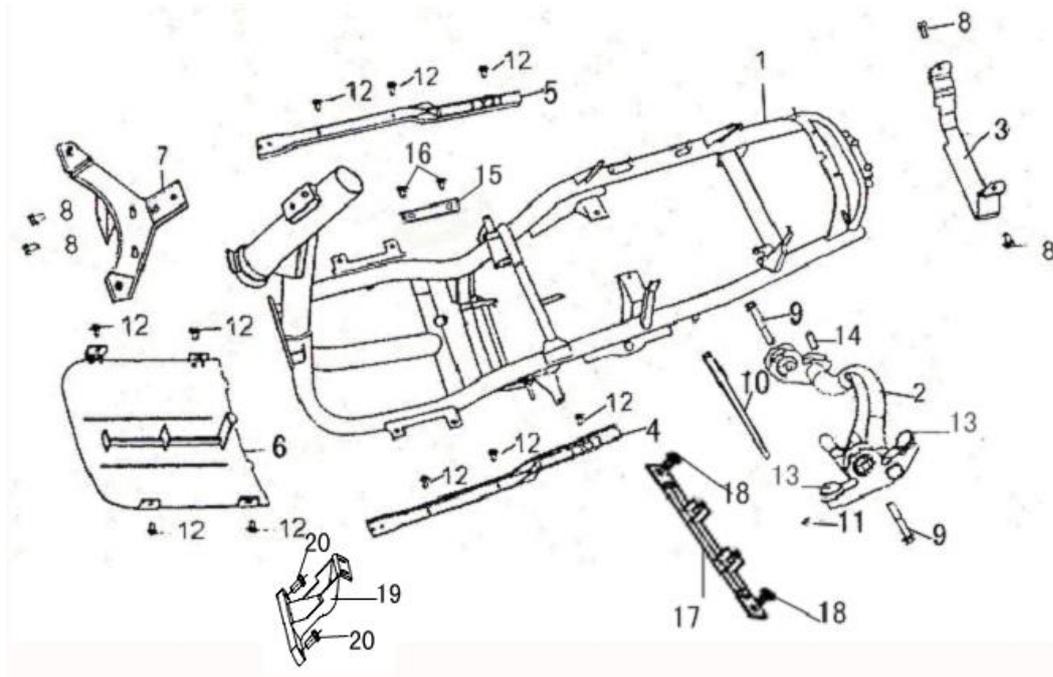

F-28 Frame body


REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2801	FLAME	1	
2	F2802	HANGE ENGINE	1	
3	F2803	SPLINT FUEL TANK	1	
4	F2804	BRACKET PEDAL LH	5	
5	F2805	BRACKET PEDAL RH	5	
6	F2806	FENDER FRAME	10	
7	F2807	HORN BRACKET	1	
8	F2808	BOLT M8X12	4	
9	F2809	BOLT M10X55	2	
10	F2810	BOLT M10X185	1	
11	F2811	NUT M10	1	
12	F2812	BOLT M6X10	10	
13	F2813	RUBBER SWING	2	
14	F2814	BUSHING SWING	1	
15	F2815	NAMEPLATE	1	
16	F2816	RIVETΦ3.2×9	2	
17	F2817	SOCKET FIXUP BOX FR	1	
18	F2818	BOLT M6X12	2	

19	F2819	BRACKET LAMP	5	
20	F2820	BOLT M6X14	2	

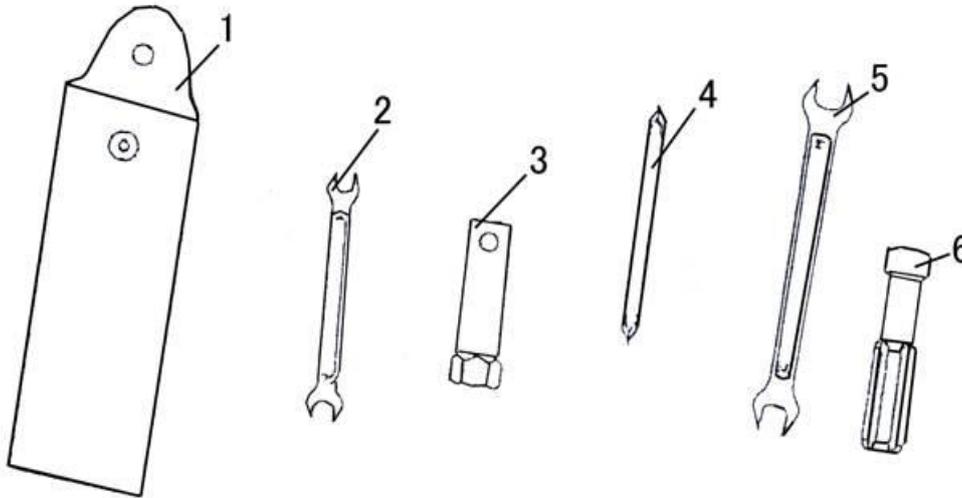


F-29 Tool set

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F2901	TOOLBAG	1	
2	F2902	SPANNER8~10	1	
3	F2903	SLEEVE SPARK PLUG	1	
4	F2904	DRIVER	1	
5	F2905	SPANNER12-14	1	
6	F2906	SOCKET DRIVER	1	

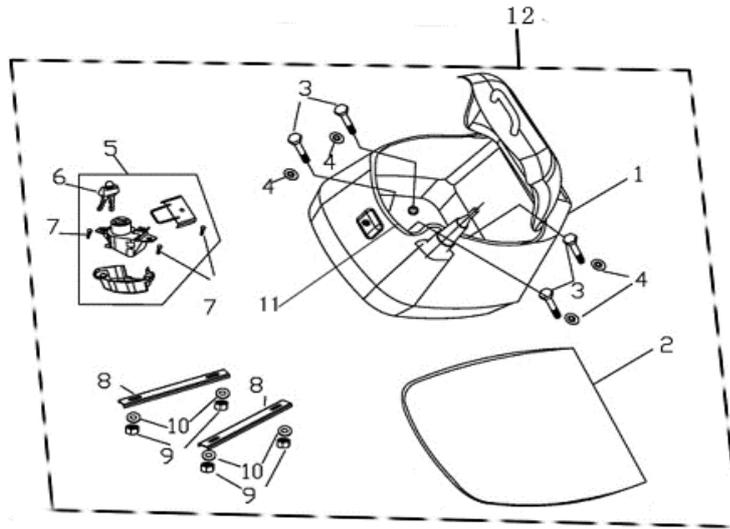

F-30 REAR CARRIER (B)

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y
1	F3001	GOODS BOX RR	1
2	F3002	RUBBER WASHER	1
3	F3003	BOLT M8X40	4
4	F3004	WASHER	4
5	F3005	ASSY LOCK RR GOODS BOX	10
6	F3006	KEY	2
7	F3007	BOLT M6X20	3
8	F3008	BOARD FIXUP GOODS BOX	2
9	F3009	NUT M8	4
10	F3010	FLAT WASHER 8	4
11	F3011	SEAL BAND	1
12	F3012	GOODS BOX ASSY SILVER	10
	F3012	GOODS BOX ASSY RED	10
	F3012	GOODS BOX ASSY BLUE	10

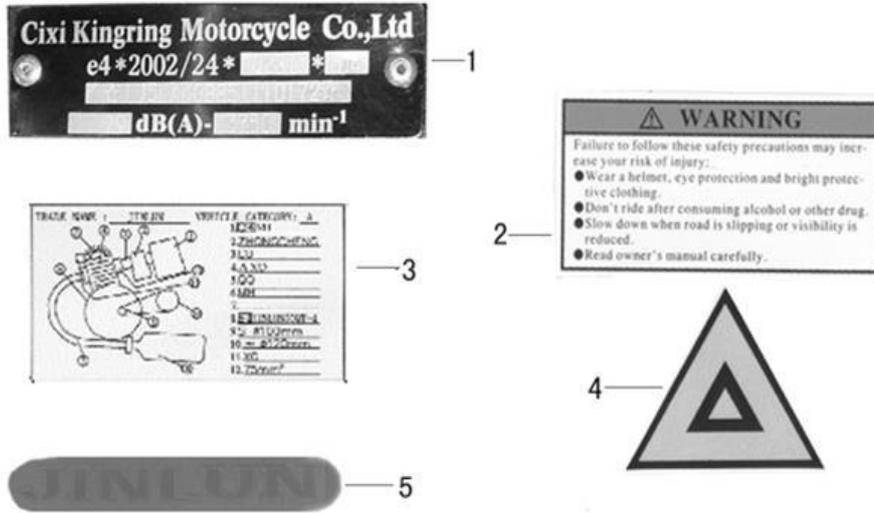

F-31 Mark

REF.NO.	PART NO.	DESCRIPTION	Q.T.Y	
1	F3101		1	
2	F3102		1	
3	F3103		1	
4	F3104		1	
5	F3105		1	





24


1
2





15



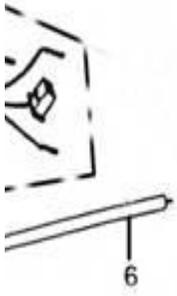





← 1
← 11
← 1

2
1

13
-13

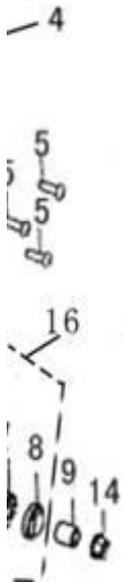

0
|
2
|
3

